

License Activation

This Help Guide is for those who have applied for an additional service license for a Sony digital camera. It explains how to activate the license on your camera.

[Activating a license](#)[Managing licenses](#)

Activating a license

Load the license file saved on a memory card to the camera and activate the license.

- 1 Save the license file to the root directory (the top level of the hierarchy) of the memory card.**
- 2 Insert the memory card containing the license file into the memory card slot of the camera, and then turn on the camera.**
An installation confirmation screen will be displayed.
- 3 Select [OK].**

Note

- A license file is issued for each individual camera. It is not possible to install a license file for a camera with a different serial number.

TP1001273298

Managing licenses


You can check the information for the licenses activated on your camera or delete the licenses.

① **MENU** →  (**Setup**) → [**Setup Option**] → [**Manage Licenses**] → **desired item**.

Menu item details

License List:

Displays a list of activated licenses and the number of days they are valid.

You can delete a license by selecting the license you want to delete and pressing the  (Delete) button.

Delete All:

Deletes all of the activated licenses.

Note

- When there are no activated licenses, this menu item does not appear on the camera.
- For perpetual licenses, the number of valid days is not displayed.
- Activated licenses will not be deleted even if you initialize the camera.