

Remote Commander

RMT-P1BT

Use this Help Guide when you have issues or questions on how to use your Remote Commander.



### **Supported camera models**

This unit is Remote Commander which is compatible with the Bluetooth function.  
For camera models compatible with this unit, view [here](#). (Another window will open.)

### **Pairing the Remote Commander with the camera**

Before establishing a Bluetooth connection, you must pair the Remote Commander with the camera (device registration). For the detailed procedure, view [here](#).

### **What if the remote commander operation fails?**

In the event that the remote commander operation fails, view [here](#).

### [Identifying the parts](#)

#### Preparations

##### [Unpacking](#)

##### [Inserting the battery](#)

##### [Pairing the Remote Commander with the camera](#)

##### [Preventing unintentional operations](#)

#### Shooting

##### [Shooting a still image](#)

##### [Shooting a video](#)

##### [Adjusting the camera focus](#)

##### [Zooming the camera](#)

##### [Indicator activities](#)

##### [Activating the camera's C1 or AF-ON function](#)

#### About this unit

[Notes on use](#)

---

[Specifications](#)

---

[Trademarks](#)

---

Troubleshooting


---

[What if the remote commander operation fails?](#)

---

4-748-144-12(2) Copyright 2019 Sony Corporation

## Identifying the parts

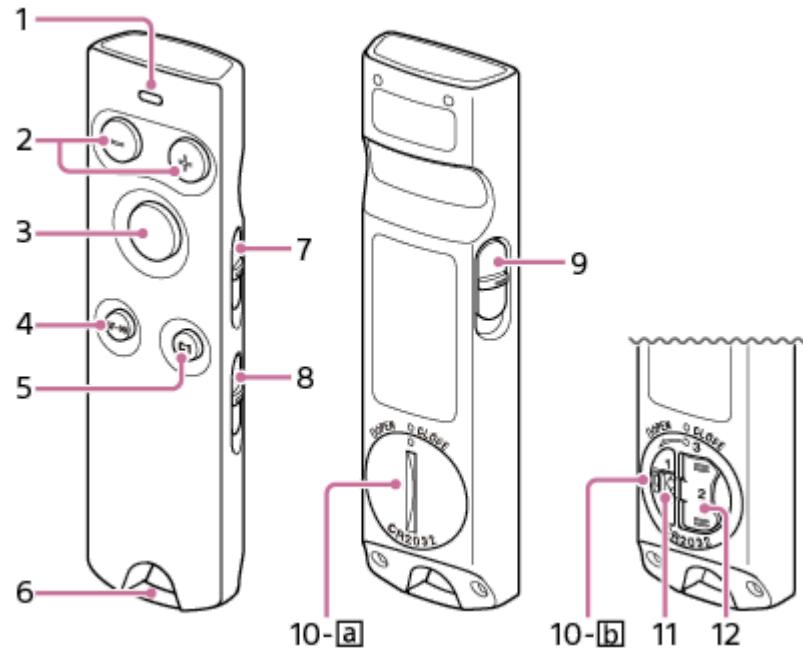

## 1. Indicator

Indicates the camera's operational state in accordance with the Remote Commander operation.

## 2. Focus/Zoom button

Adjusts the camera focus or zooms in/out the camera. Slide the Remote Commander's ZOOM/FOCUS switch to the position suitable for your purpose. For details, see [Adjusting the camera focus](#) or [Zooming the camera](#).

## 3. Shutter-release/REC button

Shoots a still image or starts recording a video with the camera. Slide the Remote Commander's MOVIE/STILL switch to the position suitable for your purpose. For details, see [Shooting a still image](#) or [Shooting a video](#).

## 4. AF-ON button\*

## 5. C1 button\*

## 6. Strap holder

## 7. ZOOM/FOCUS switch

## 8. MOVIE/STILL switch

## 9. LOCK switch

## 10. [a]/[b] Battery cover


## 11. Battery cover locking latch

## 12. Battery cover turning knob

\* Activates the function assigned to the C1 or AF-ON button on the camera. For details about the camera's settings, refer to the operating instructions supplied with your camera.

## About the built-in Bluetooth® antenna

The Remote Commander is equipped with a built-in Bluetooth antenna at the section shown in the following illustration. When you operate the Remote Commander, keep your hand away from the section to prevent a possible Bluetooth connection failure.

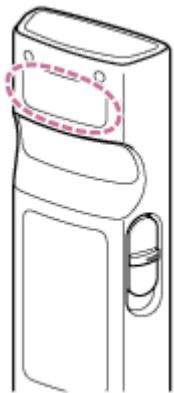

---

### Related Topic

- [Activating the camera's C1 or AF-ON function](#)
- [Preventing unintentional operations](#)
- [Inserting the battery](#)
- [Pairing the Remote Commander with the camera](#)
- [Indicator activities](#)

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Unpacking

---

If you find anything missing, please contact your dealer.

The number in the parentheses indicates the quantity.

- Remote Commander (1)
- Lithium coin cell battery (CR2032) (1)
- Set of printed documentation

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT


## Inserting the battery

Insert the supplied lithium coin cell battery (CR2032) into the battery chamber of the Remote Commander.

### 1 Turn the battery cover on the back of the Remote Commander toward “OPEN.”


#### To turn the **a** battery cover:

- Put a coin, or a similar object, into the groove of the battery cover, and then turn the battery cover.

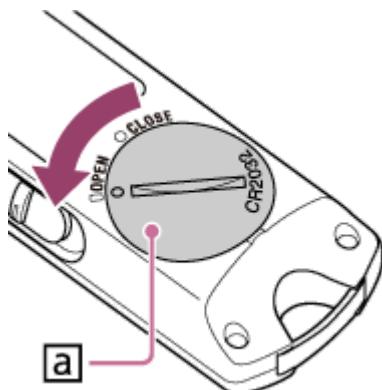


#### To turn the **b** battery cover:

- Slide the battery cover locking latch in the direction of the arrow to raise the battery cover turning knob (1), and then turn the battery cover turning knob (2).

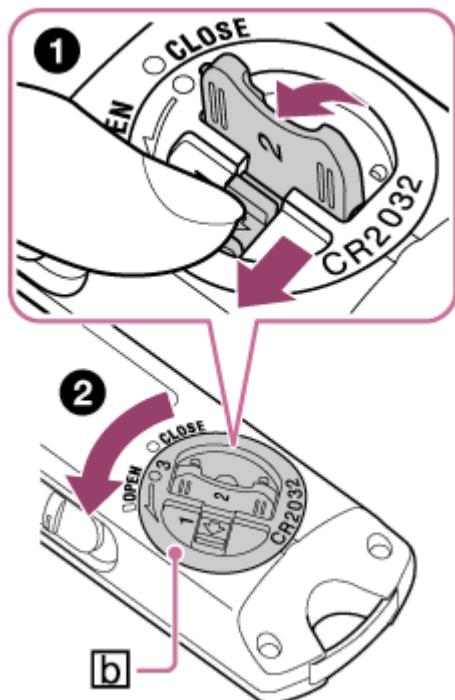

### 2 Remove the battery cover and insert the supplied lithium coin cell battery.

Insert the battery so that the + terminal is facing upward.  
(+ on the battery chamber indicates the direction of the battery.)

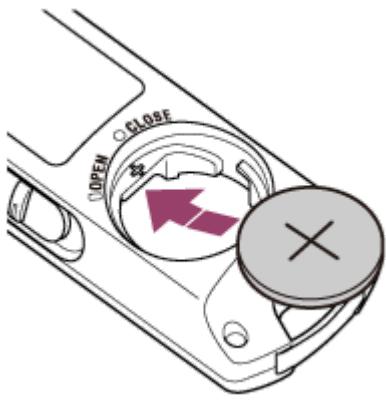

- 3 Turn the battery cover until you reach “CLOSE.”

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander

RMT-P1BT

## Pairing the Remote Commander with the camera

Connect the Remote Commander and a camera with the Bluetooth function.


Before connecting the Remote Commander and a camera with the Bluetooth function, you must pair them together (device registration).

Before you start, check that the Remote Commander's LOCK switch is in the position to the opposite of "LOCK."

### Note

- For notes on camera operation via the Bluetooth connection, refer to the Help Guide of your camera.

- On the camera, select MENU → (network) → [Bluetooth] or [Bluetooth Settings] → [Bluetooth Function] → [On].  
If the pairing screen appears on the camera's screen, proceed to step 4.
- On the camera, select MENU → (network) → ([Bluetooth]) → [Bluetooth Rmt Ctrl] → [On].<sup>\*</sup>  
If the pairing screen appears on the camera's screen, proceed to step 4.  
\* Depending on your camera, the following menu may appear instead.  
MENU → (network) → [Transfer/Remote] → [Bluetooth Rmt Ctrl] → [On]
- On the camera, select MENU → (network) → [Bluetooth] or [Bluetooth Settings] → [Pairing] to display the pairing screen.
- On the Remote Commander, press and hold the Shutter-release/REC button (①) and the Focus/Zoom button (either the + button (②) or the - button (③)) at the same time for at least 7 seconds.

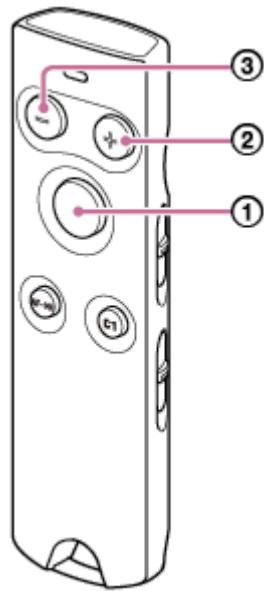

- When a confirmation message appears on the camera's screen, select [OK].  
When pairing is complete, [Paired.] appears.

If the remote commander is not operated for a certain period while the Bluetooth connection is active, / (no Bluetooth connection) may appear on the camera's screen. In this case, operating the remote commander will automatically re-establish the Bluetooth connection.

## Icons displayed on the camera screen

 /  (Bluetooth connection available): The Bluetooth connection between this unit and the camera has been established.

 /  (Bluetooth connection unavailable): The Bluetooth connection between this unit and the camera is not established.

 (remote commander mark): You can operate the camera using this unit.

### Note


- If pairing fails, the Remote Commander's indicator flashes rapidly. If this happens, start again from step 3. A pairing attempt times out when a certain amount of time elapses between the actions in step 4 and step 5.
- In the following situations, pair the Remote Commander and the camera again.
  - When using the Remote Commander to operate a different camera (After having connected the Remote Commander with a different camera, you also must pair the Remote Commander and the original camera again when connecting to the original camera.)
  - When the camera's network settings have been reset
- Depending on the camera you are using, the following functions cannot be used when [Bluetooth Rmt Ctrl] is set to [On]. If you want to use the following functions after using this unit, set [Bluetooth Rmt Ctrl] to [Off]. For information about the camera's functions, refer to the Help Guide for your camera.
  - Power-saving mode
  - Infrared remote commander

Remote Commander  
RMT-P1BT

## Preventing unintentional operations

You can disable all the buttons on the Remote Commander in order to prevent unintentional operations while you carry it around.

- 1 Slide the LOCK switch to the “LOCK” position.

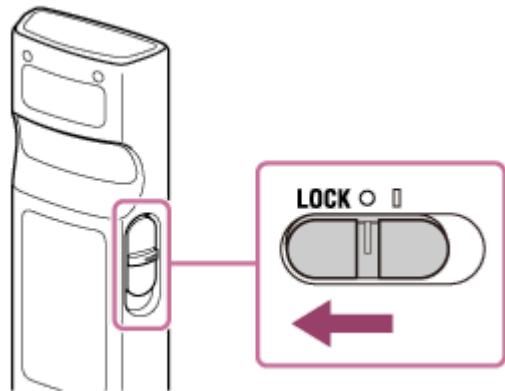

To enable the buttons, slide the LOCK switch to the position to the opposite of “LOCK.”


4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Shooting a still image

Operate the Remote Commander connected to a camera with the Bluetooth function to shoot a still image.

- 1 Slide the MOVIE/STILL switch to the “STILL” position.

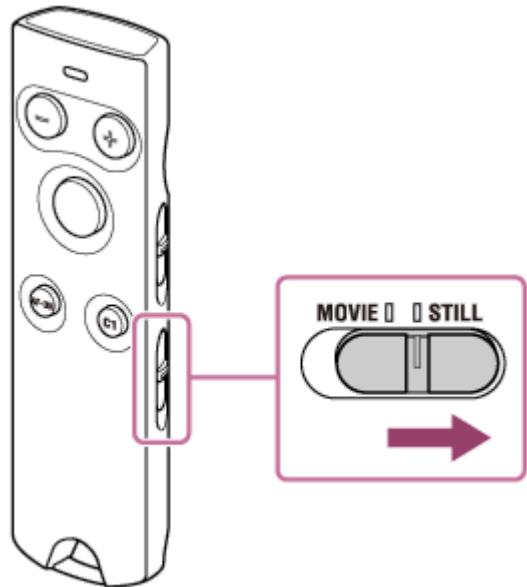


- 2 Press the Shutter-release/REC button (①).

Press the button halfway down to focus, and then press it all the way down to shoot.

When the camera comes into focus by the auto focus function, the Remote Commander's indicator turns on.

When shooting succeeds, the indicator turns on.

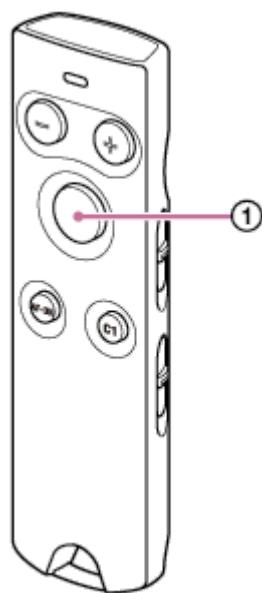

### Related Topic

- [Pairing the Remote Commander with the camera](#)

● Shooting a video


4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Shooting a video

Operate the Remote Commander connected to a camera with the Bluetooth function to shoot a video.


- 1 Slide the MOVIE/STILL switch to the “MOVIE” position.

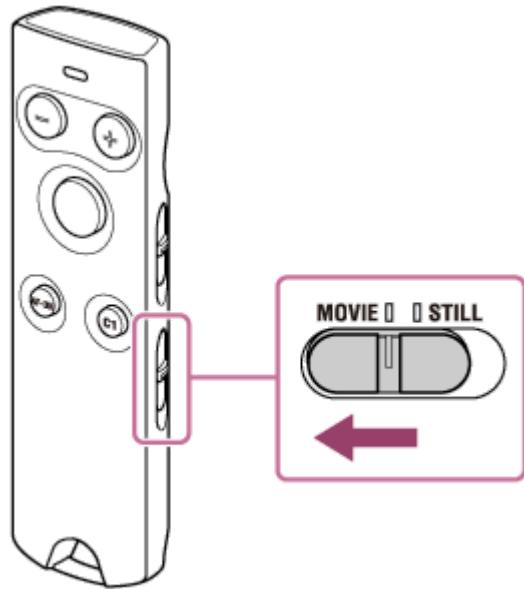

- 2 Press the Shutter-release/REC button (①).

Video recording starts. To stop recording, press the Shutter-release/REC button again.

When recording starts, the Remote Commander's indicator turns on. When recording stops, the indicator turns off.

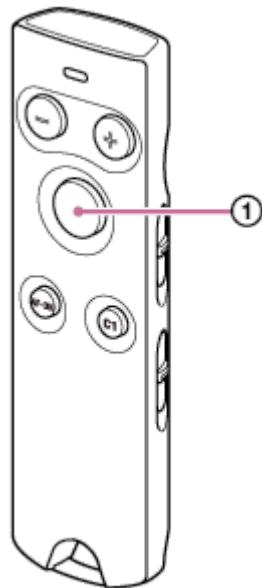

### Related Topic

- [Pairing the Remote Commander with the camera](#)

● **Shooting a still image**

4-748-144-12(2) Copyright 2019 Sony Corporation


## Adjusting the camera focus

Operate the Remote Commander connected to a camera with the Bluetooth function to adjust the camera focus.


### Note

- To adjust the camera focus, you must place the camera in manual focus mode.

- 1 Slide the ZOOM/FOCUS switch to the “FOCUS” position.

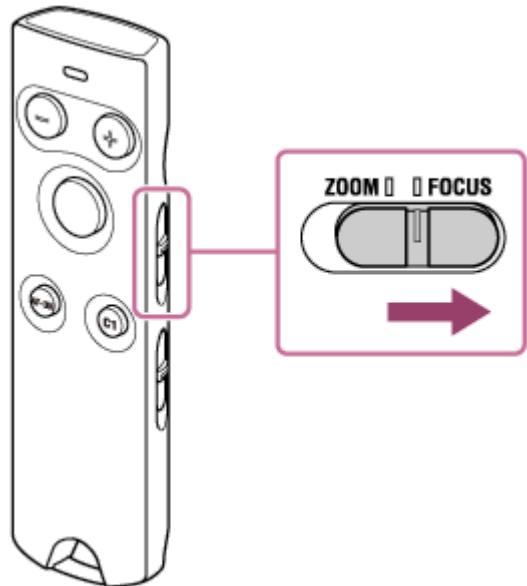

- 2 Press the Focus/Zoom button (+/-) (①) to adjust the camera focus.

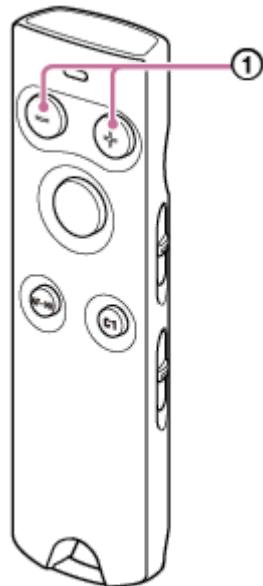

- [Pairing the Remote Commander with the camera](#)
- [Zooming the camera](#)


4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT


## Zooming the camera

Operate the Remote Commander connected to a camera with the Bluetooth function to zoom in/out the camera.

- 1 Slide the ZOOM/FOCUS switch to the “ZOOM” position.

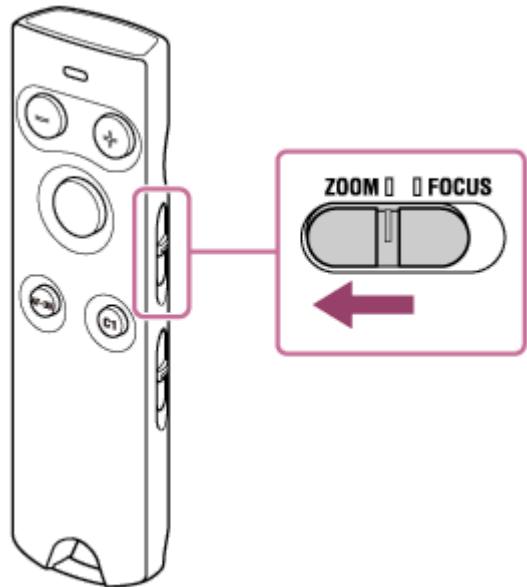

- 2 Press the Focus/Zoom button (+/-) (①) to zoom in/out the camera.

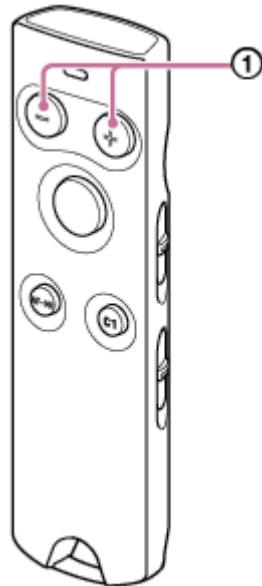

### Note

- The zoom speed varies depending on the camera or lens.
- The zoom function works with a camera or lens featuring a built-in electronic power zoom. If the digital zoom function of the camera is turned on, digital zooming will be performed.

---

## Related Topic

- [Pairing the Remote Commander with the camera](#)
- [Adjusting the camera focus](#)

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Indicator activities

The Remote Commander's indicator lights/flashes in accordance with the Remote Commander operation or the operation or state of the camera as described below:

Lights	<ul style="list-style-type: none"><li>when the camera comes into focus by the auto focus function</li><li>when you shoot a still image or start recording by pressing the Shutter-release/REC button</li><li>while video recording is in progress</li><li>when pairing succeeds</li><li>when the camera receives focus/zoom (+/-) signals from the Remote Commander</li></ul>
Flashes	<ul style="list-style-type: none"><li>while pairing is in progress</li><li>while the self-timer is in operation</li></ul>
Flashes rapidly	<ul style="list-style-type: none"><li>when the camera fails to receive operation signals from the Remote Commander</li><li>when pairing fails</li></ul>

### Related Topic

- [Identifying the parts](#)

Remote Commander  
RMT-P1BT

## Activating the camera's C1 or AF-ON function

By pressing the Remote Commander's C1 or AF-ON button, you can activate the function assigned to the camera's C1 or AF-ON button.

For details about the camera's C1 or AF-ON button, refer to the operating instructions supplied with your camera.

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Notes on use

- When using this unit in an aircraft or a hospital, follow the instructions from the airline company or the hospital to avoid possible interference with instruments or medical devices caused by radio waves from this unit.

### Do not use/store the unit in the following places

Storing under direct sunlight or near a heater

The unit may become discolored or deformed, and this may cause a malfunction.

### Notes on the battery

- Make sure that the battery is worn out before disposal. To dispose of the battery, insulate the battery contacts with an adhesive strip.  
If the battery fluid leaks, wipe away any fluid on the battery chamber before inserting a new battery.  
If the battery fluid comes in contact with your body or clothing, thoroughly rinse it away with water.
- Depending on the length of the post production period, even a new battery may have a shorter life.

---

### Related Topic

- [Inserting the battery](#)

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Specifications

<b>Dimensions (W/H/D) (Approx.)</b>	33 mm × 116.5 mm × 15.1 mm (1 5/16 in. × 4 5/8 in. × 5/8 in.)
<b>Mass (Approx.)</b>	35 g (1.3 oz) (Without the battery)

Design and specifications are subject to change without notice.

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## Trademarks

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation is under license.

4-748-144-12(2) Copyright 2019 Sony Corporation

Remote Commander  
RMT-P1BT

## What if the remote commander operation fails?

### Checking the Bluetooth setting on the camera

- [Bluetooth Function] may be set to [Off] on the camera.

On the camera, select MENU →  (network) → [Bluetooth] or [Bluetooth Settings] → [Bluetooth Function] and make sure that [On] is selected.

- [Bluetooth Rmt Ctrl] may be set to [Off] on the camera.

On the camera, select MENU →  (network) → ([Bluetooth]) → [Bluetooth Rmt Ctrl] and make sure that [On] is selected.\*

\* Depending on your camera, the following menu may appear instead.

MENU →  (network) → [Transfer/Remote] → [Bluetooth Rmt Ctrl] → [On]

### Checking the settings on this unit

- The Remote Commander's buttons are disabled. Slide the Remote Commander's LOCK switch to the position to the opposite of "LOCK."
- Pairing with the camera may be lost. Pair the Remote Commander and the camera again.
- The battery in this unit may be worn out. Replace the battery with a new one.

### Related Topic

- [Preventing unintentional operations](#)
- [Pairing the Remote Commander with the camera](#)
- [Inserting the battery](#)