

Home Theatre System
HT-A9



Use this Help Guide when you have any questions on how to use the speaker system.

Getting Started

[About Manuals of the Speaker System](#)

[What You Can Do with the Speaker System](#)

Guide to Parts and Controls

[Control Box](#)

[Speakers](#)

[Remote Control](#)

[Using the Home Menu](#)

Setting Up

Installing the Speaker System

[Installing the Control Box and Speakers](#)

[Mounting the Speakers on a Wall](#)

Connecting to a TV

- [Connecting a TV Compatible with ARC/eARC](#)

[When Your TV Has the S-CENTER SPEAKER IN Jack](#)

Connecting an AV Device

- [Connecting an AV Device Compatible with the 2K/4K Video Format](#)

- [Connecting an AV Device Compatible with the 8K Video Format](#)

[Connecting to the AC Outlet \(mains\)](#)

[Performing Initial Settings](#)

[If the Speakers Are not Connected Correctly](#)

Watching Images

[Watching TV](#)

[Playing the Connected AV Device](#)

Listening to Music/Sound

Listening to Sony TV Sound with the BLUETOOTH® Function

- [What You Can Do by Connecting a TV with the BLUETOOTH Function](#)

- [Listening to TV Sound by Connecting the Speaker System and TV Wirelessly](#)

- [Listening to Sound of the Paired TV](#)

Listening to Music/Sound with the BLUETOOTH Function

- [Listening to Music by Pairing the Mobile Device That Is Connected for the First Time](#)

- [Listening to Music from the Paired Device](#)

Listening to Sound of the Connected TV or Device Using Headphones

- [Listening to Sound by Pairing with Headphones](#)

- [Listening to Sound with Paired Headphones](#)

- [About the Connection of the Headphones](#)

Listening to Music by Connecting to a Network

[What You Can Do by Connecting the Speaker System to a Network](#)

Connecting to a Wireless Network

- [Setting up a Wireless Network Connection on the Home Menu](#)

- [Setting up a Wireless Network Connection Using Sony | Music Center](#)

[Setting up a Wi-Fi Connection Using an iOS Device](#)

Connecting to a Wired Network

[Connecting to a PC or Router with a LAN Cable](#)

[Setting up a Wired Connection](#)

[Enjoying 360 Reality Audio](#)

[Using Spotify](#)

[Streaming Music with Chromecast built-in](#)

[Operating the Speaker System by Talking to an Alexa Built-in Device](#)

[Streaming Music with an iOS Device](#)

[Using Sony | Music Center](#)

[Listening to Music on your PC via a Home Network](#)

Adjusting the Volume and Sound Quality

[Adjusting the Volume](#)

[Enjoying Immersive Surround Experience \(IMMERSIVE AE\)](#)

[Setting the Sound Effect That Is Tailored to Sound Sources \(Sound Mode\)](#)

[Making Dialogs Clearer \(VOICE\)](#)

[Enjoying Clear Sound with Low Volume at Midnight \(NIGHT\)](#)

Adjusting the Delay Between the Picture and Sound

[When Watching the TV](#)

[When Watching Another Device](#)

[Enjoying Multiplex Broadcast Sound \(AUDIO\)](#)

Adjusting the Dialog Volume While the DTS:X Content is Played Back

[When Watching the TV](#)

[When Playing Content on an AV Device](#)

Using the Speaker System by Interlocking with a TV

[Operating the Speaker System by Interlocking with a TV \(Control for HDMI Function\)](#)

[Operating the Speaker System by Interlocking with a TV Compatible with the "BRAVIA" Sync Function](#)

Changing the Settings

[Changing the Brightness of the Front Panel Display and Indicators \(DIMMER\)](#)

[Saving Power in Standby Mode](#)

[Performing Easy Setup](#)

Performing Advanced Settings

- [Using the \[Advanced Settings\] Menu](#)

- [\[Speaker Settings\]](#)

- [\[Audio Settings\]](#)

- [\[HDMI Settings\]](#)

- [\[Bluetooth Settings\]](#)

- [\[System Settings\]](#)

- [\[Network Settings\]](#)

- [\[Resetting\]](#)

- [\[Software Update\]](#)

[Updating the Software](#)

Troubleshooting

[Troubleshooting](#)

Power

- [The speaker system does not power up.](#)

- [The speaker system does not turn on even when the TV is turned on.](#)

- [The speaker system turns off when the TV is turned off.](#)

- [The speaker system does not turn off even when the TV is turned off.](#)

- [The speaker system cannot be turned off.](#)

Picture

- [There is no picture or the picture is not output correctly.](#)

- [The picture on the TV screen is distorted.](#)

- [3D content from the HDMI IN jack does not appear on the TV screen.](#)

- [High definition video signal \(4K/60p 4:4:4, 4:2:2 and 4K/60p 4:2:0 10 bit, etc.\) from the HDMI IN jack does not appear on the TV screen.](#)

- [An image is not displayed on the entire TV screen.](#)

- [Picture and sound of the device that is connected to the speaker system are not output from the TV when the speaker system is not turned on.](#)

[HDR contents cannot be shown in high-dynamic range.](#)

Sound

[No sound is output from the speaker system.](#)

[The speaker system cannot connect to a TV with the BLUETOOTH function.](#)

[No TV sound is output from the speaker system.](#)

[The sound skips or noise is generated.](#)

[Picture and sound of the device that is connected to the speaker system are not output from the TV when the speaker system is not turned on.](#)

[The sound is output from both the speaker system and TV.](#)

[The sound is interrupted while watching a TV program or content on a Blu-ray Disc, etc.](#)

[The TV sound from this speaker system lags behind the image.](#)

[No sound or only a very low-level sound of the device connected to the speaker system is heard.](#)

[The surround effect cannot be obtained.](#)

[No sound is output from the optional subwoofer.](#)

[Sound is not output from some speakers.](#)

Sound Field Optimization

[Sound Field Optimization is failed.](#)

Mobile Device Connection

[Pairing cannot be achieved.](#)

[BLUETOOTH connection cannot be completed.](#)

[Sound of the connected BLUETOOTH mobile device is not output from the speaker system.](#)

Headphones Connection with the BLUETOOTH Function

[Pairing cannot be achieved.](#)

[BLUETOOTH connection cannot be completed.](#)

[No sound is output from the connected BLUETOOTH headphones.](#)

[The BLUETOOTH connection with the headphones becomes disconnected.](#)

Wireless LAN Connection

[The speaker system cannot connect to the network or the network connection is unstable.](#)

[The wireless LAN router you want is not shown in the wireless network list.](#)

Internet Connection

[You cannot connect the speaker system to the Internet.](#)

Remote Control

[The remote control of this speaker system does not function.](#)

Others

[The Control for HDMI function does not work properly.](#)

[\[PRTCT\], \[PUSH\], speaker name \(\[FL\], \[FR\], \[RL\], \[RR\], or \[SUB\]\), and \[POWER\] flash alternately in the front panel display.](#)

[\[HIGH\], \[TEMP\], and \[ERROR\] appear alternately for 2 seconds each in the front panel display, \[STANDBY\] appears in the front panel display, then the speaker system is turned off.](#)

[\[BT TX\] appears in the front panel display.](#)

[Wireless functions \(wireless LAN, the BLUETOOTH function, speakers, or optional subwoofer\) are unstable.](#)

[Spotify cannot be played with the MUSIC SERVICE button, or cannot be played on the way of playback.](#)

[The speaker system restarts.](#)

[Resetting the Speaker System](#)

Additional Information

[Supported Input Audio Formats](#)

[Supported HDMI Video Formats](#)

[On BLUETOOTH Communication](#)

[Copyrights and Trademarks](#)

Home Theatre System
HT-A9

About Manuals of the Speaker System

The information included in each manual is as shown below.

Startup Guide



Introduces the initial procedures concerning installation and connection for using the speaker system, and operations until you play music.

Operating Instructions



Explains the basic operations.

- Connection with a TV or other devices
- Playback for music/sound of devices connected with an HDMI cable or the BLUETOOTH function
- Sound adjustment, etc.

Help Guide (Web manual) (this document)



Provides all operations including advanced usage.


- Playback for music/sound with the network function
- Details on menu items, etc.

Hint

- The instructions in these manuals describe operations using the controls on the remote control.
- Characters in brackets [] appear on the TV screen or front panel display.
- Details are omitted from the illustrations.

What You Can Do with the Speaker System

The speaker system supports object-based audio formats such as Dolby Atmos and DTS:X as well as HDR video formats such as HDR10, HLG, and Dolby Vision.

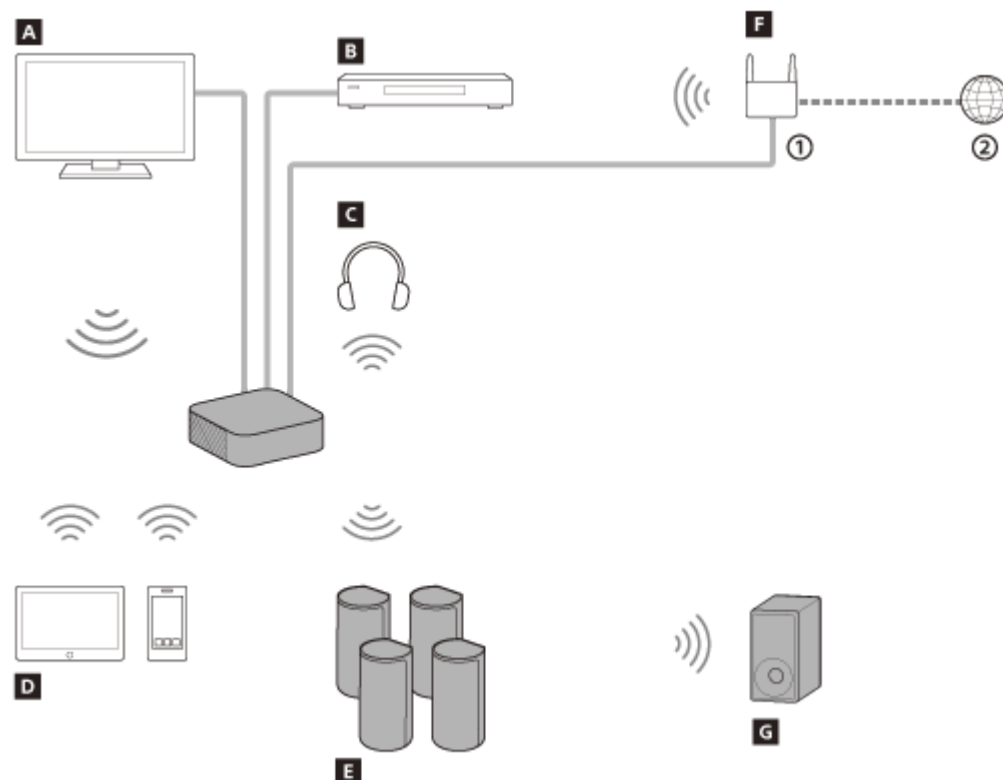

- ① Wireless LAN router
- ② Internet

A TV

You can listen to sound of a TV with the speaker system by connecting the speaker system and TV with an HDMI cable or BLUETOOTH function.

[Watching TV](#)

[What You Can Do by Connecting a TV with the BLUETOOTH Function](#)

B Blu-ray Disc™ player, set-top box, gaming console, etc.

You can listen to sound of an AV device with the speaker system by connecting the speaker system and AV device with an HDMI cable.

[Playing the Connected AV Device](#)

C Headphones

You can listen to sound of the connected TV or AV device from headphones by connecting the speaker system and headphones with the BLUETOOTH function.

[Listening to Sound by Pairing with Headphones](#)

D Mobile device

You can listen to sound of a mobile device or portable audio device with the speaker system by connecting the speaker system and mobile device with the BLUETOOTH function.

[Listening to Music by Pairing the Mobile Device That Is Connected for the First Time](#)

E Supplied speakers

The supplied speakers are connected to the control box automatically when they are turned on.

F Network

You can perform streaming playback of music content or play music files stored on your PC with the speaker system by connecting the speaker system to the same network as that of the smartphone, tablet, or iOS device.

[What You Can Do by Connecting the Speaker System to a Network](#)

G Optional subwoofer


For the operations of the optional subwoofer, refer to its operating instructions.

For the supported optional subwoofer, confirm on the Sony website.

5-025-234-11(3) Copyright 2021 Sony Corporation

Control Box

Front

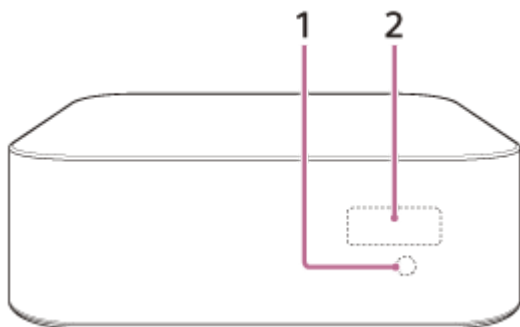


1. Remote control sensor

Point the remote control at the remote control sensor to operate the speaker system.

2. Front panel display

Rear

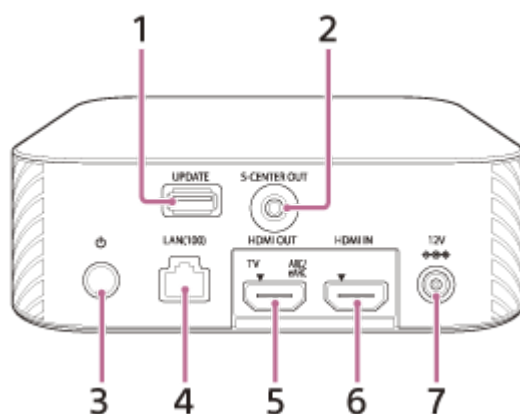

1. UPDATE port

Connect the USB memory when updating the speaker system.

2. S-CENTER OUT jack

3. (power) button

Turns on the speaker system or sets it to standby mode.

4. LAN(100) port

5. HDMI OUT (TV ARC/eARC) jack

Connect a TV that has an HDMI input jack with an HDMI cable. The speaker system is compatible with eARC and ARC. ARC is the function that sends TV sound to an AV device such as the speaker system from the TV's HDMI jack. eARC is an extension of ARC and enables transmission of the object audio and multi-channel LPCM content that cannot be transmitted with ARC.

6. HDMI IN jack

7. DC IN terminal


Related Topic

- [When Your TV Has the S-CENTER SPEAKER IN Jack](#)
- [Connecting an AV Device Compatible with the 2K/4K Video Format](#)
- [Connecting an AV Device Compatible with the 8K Video Format](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

Speakers

Front

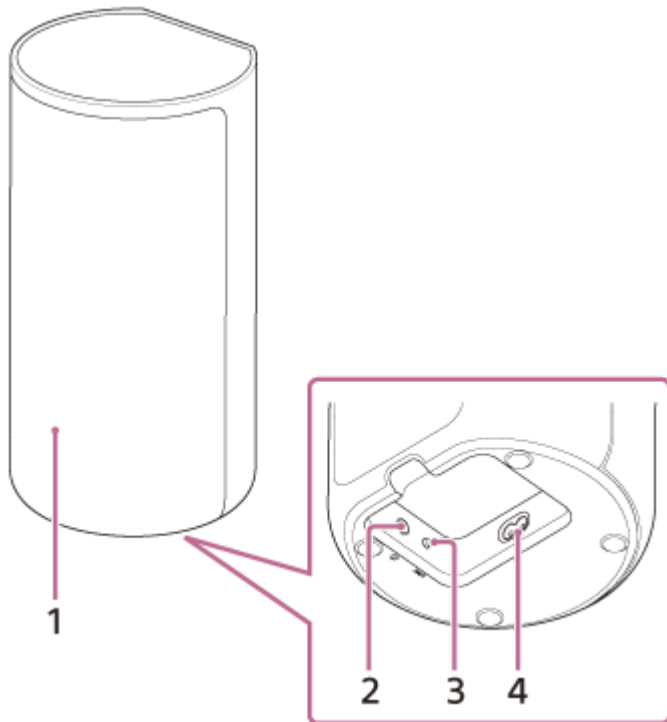

1. Power indicator

Displays the connecting status between the control box and speaker as well as the power condition of the speaker.

- Red
 - Lights up: The speaker is in standby mode.
- Green
 - Lights up: The speaker is connected to the control box.
 - Flashes slowly: The speaker is attempting to connect to the control box.
 - Flashes twice repeatedly: The speaker is in the pairing standby status via manual connection.
- Turns off
 - The speaker is turned off.


2. (power) button

Turns on/off the speaker.

3. LINK button

4. AC inlet

Rear

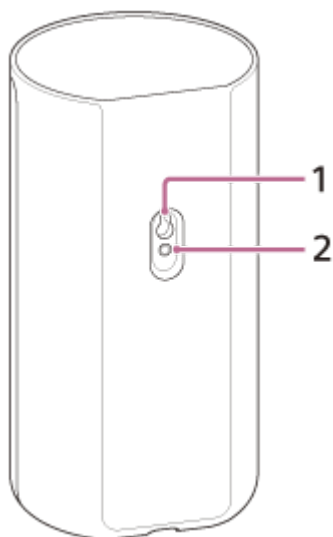


1. Wall mounting hole

2. Mounting hole for the general speaker stand

Note

- When using the wall mounting hole (1) or mounting hole for the general speaker stand (2), peel off the cover on them with a safety-pin, etc.

Remote Control

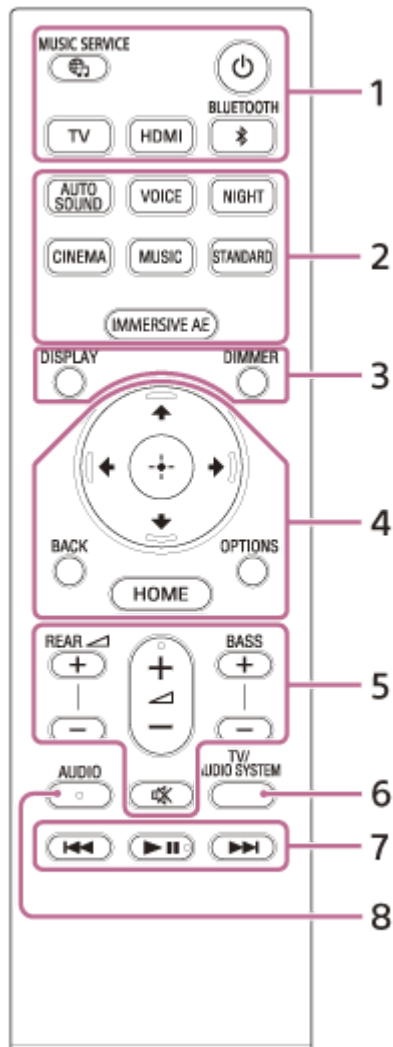

1. (power)

Turns on the speaker system or sets it to standby mode.

(MUSIC SERVICE) button

If you have previously played music on Spotify on the speaker system, you can resume playback by pressing this button.

This button may not be available in some countries/regions.

BLUETOOTH

TV

HDMI

2. AUTO SOUND

VOICE

NIGHT

CINEMA

MUSIC

STANDARD

IMMERSIVE AE

3. DIMMER

DISPLAY

Displays playback information on the TV screen.

Playback information is displayed in the front panel display for TV input.

4. (up)/ (down)/ (left)/ (right)

 (enter)

BACK

OPTIONS

Displays the options menu on the TV screen.

The options menu is displayed in the front panel display for TV input.

HOME

5. REAR (rear speakers volume) +/-

Adjusts the volume of the rear speakers.

 (volume) +(*)/-

Adjusts the volume.

BASS (bass sound volume) +/-

Adjusts the volume of the bass sound or optional subwoofer when connecting it.

 (muting)

Turns off the sound temporarily.

6. TV/AUDIO SYSTEM

Switches the output for the connected TV sound between the TV and speaker system.

Note

- This button works in the following conditions.
 - The connected TV is compatible with the System Audio Control function.
 - The Control for HDMI function of the speaker system is set to on.

7. Playback operation buttons

 (previous)/  (next)

Selects the previous/next track or file.

Pressing and holding it searches backward or forward (rewind/fast forward) during playback.

 (play/pause)(*)

Starts, pauses, or re-starts playback (resume play).

8. AUDIO(*)

* The AUDIO,  (play/pause), and  (volume) + buttons have a tactile dot. Use it as a guide during operation.

About the replacement of batteries for the remote control

When the speaker system does not respond by operating with the remote control, replace two batteries with new batteries.


Use R03 (size AAA) manganese batteries for replacement.

Related Topic

- [Enjoying Immersive Surround Experience \(IMMERSIVE AE\)](#)
- [Setting the Sound Effect That Is Tailored to Sound Sources \(Sound Mode\)](#)
- [Making Dialogs Clearer \(VOICE\)](#)
- [Enjoying Clear Sound with Low Volume at Midnight \(NIGHT\)](#)

Using the Home Menu

You can display the home menu on the TV screen by connecting the speaker system and TV with an HDMI cable.

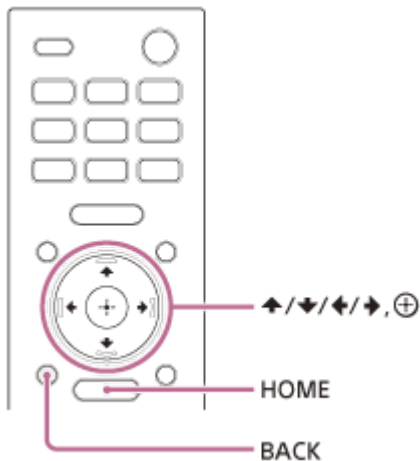

1 Press HOME.

The home menu appears on the TV screen.

2 Press **↑** (up)/ **←** (left)/ **→** (right) to select the category that you want, then press **↓** (down) or **⊕** (enter).

The items for the selected category appear under the category list on the TV screen.

- **[Watch]:** Selects the input of the TV or AV device that is connected to the speaker system.
- **[Listen]:** Selects the input of the audio device that is connected to the speaker system or music service for playing back on the speaker system.
- **[Setup]:** Performs the basic initial settings by using [Easy Setup] or various advanced settings of the speaker system.

3 Press **↑** (up)/ **↓** (down)/ **←** (left)/ **→** (right) to select the item that you want, then press **⊕** (enter).

The selected input or setting display appears on the TV screen.


To return to the previous screen, press BACK.

Installing the Control Box and Speakers


1 Choose an installation method for the control box and speakers.

They can be installed on a TV stand, shelves, etc., or mounted on the wall.

Example of installing on a TV stand and shelves:

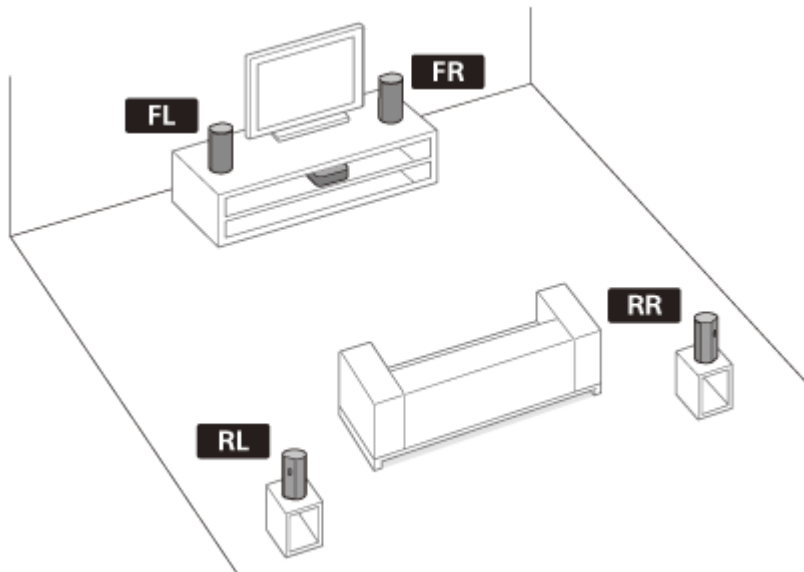

Example of mounting on the wall:

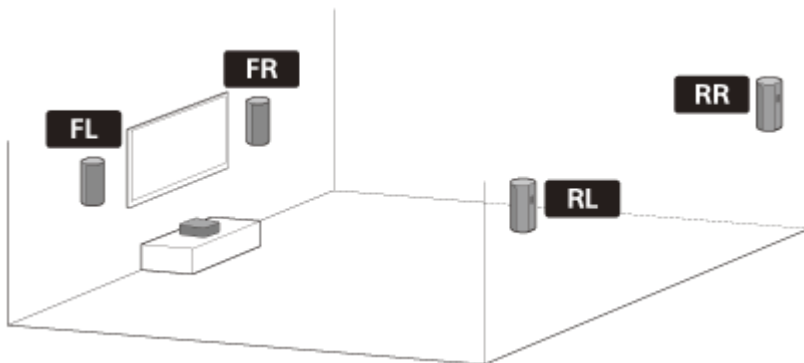


Note



- Do not place the speakers in a shelf or right below the ceiling so as not to block the sound output from the top of the speakers.
- Do not place metal objects near the speaker system. Wireless functions may become unstable.

2 Choose an installation position.

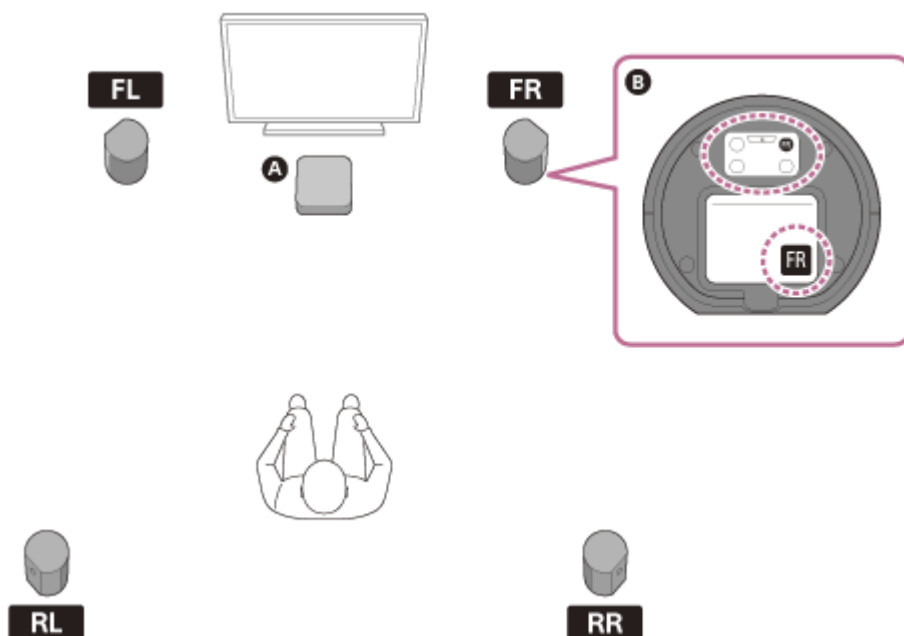

1. Install the control box on or in a shelf where the front panel display is not covered.
2. Choose the installation position of the speakers by checking the labels on the bottom of the speakers.
 - Surround sound can be experienced more effectively by installing the 4 speakers to surround your listening position and installing the front speakers on both sides of the TV.
 - If you install speakers as following, perform [Sound Field Adjustment] under [Manual Speaker Settings].
 - The distances from the TV to the front left speaker and the front right speaker have a large difference.
 - The distances from your listening position to the 4 speakers are very unbalanced.

- A** Control box
- B** Bottom of the speaker
- FL** Front left speaker
- FR** Front right speaker
- RL** Rear left speaker
- RR** Rear right speaker

Note

- Before connecting the speaker system, disconnect the AC power cords (mains leads) of the TV and other devices from the AC outlets (mains). Reconnect them after connecting the speaker system to a TV and AV devices.
- If you change the installation position of the speakers, optimize the sound field again by selecting [Setup] - [Advanced Settings] - [Speaker Settings] - [Sound Field Optimization].


When the sound from the speakers skips

The sound skipping may be improved by changing the installation position or setting. For details, see “ [The sound skips or noise is generated.](#) ”.

Related Topic

- [\[Speaker Settings\]](#)

Mounting the Speakers on a Wall

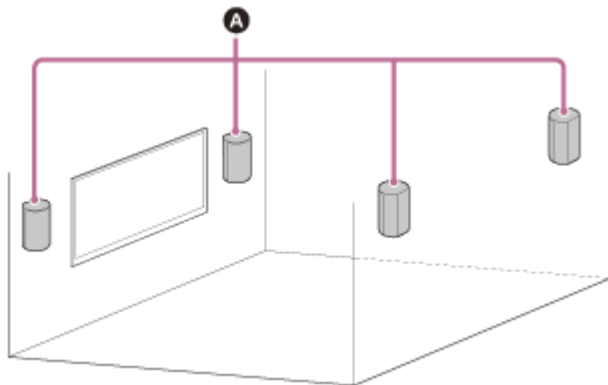


A Speakers

Note

- Prepare screws (not supplied) that are suitable for the wall material and stability. Depending on the wall material, the wall may be damaged.
- Fasten the screws securely in the wall beam.
- Hang the speakers horizontally on the reinforced wall.
- Have the installation done by a Sony dealer or licensed contractor and pay special attention to safety during the installation.
- Sony shall not be held responsible for accidents or damage caused by improper installation, insufficient wall stability, improper screw installation, natural disasters, etc.


1 Prepare screws (not supplied) that are suitable for the wall mounting hole on the rear of the speaker.

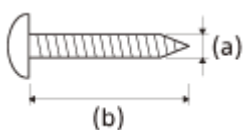

(a) 4 mm (5/32 in)

(b) More than 30 mm (1 3/16 in)


Hole on the rear of the speaker

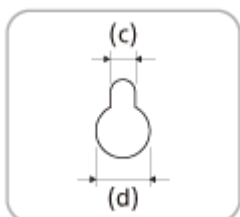

(c) 4.2 mm (11/64 in)


(d) 9.6 mm (3/8 in)

2 Fasten the screw in the wall.

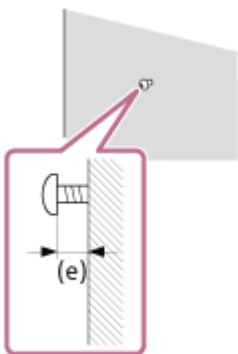

(e) Approx. 7.35 mm (approx. 19/64 in)

3 Peel off the cover on the rear of the speaker with a safety-pin, etc.

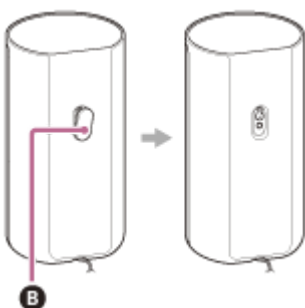


B Cover

4 Hang the speakers by confirming the type of the speakers.

Check the label on the bottom of the speaker.

- **FL** Front left
- **FR** Front right
- **RL** Rear left
- **RR** Rear right

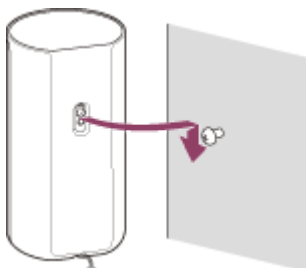


Note

- Keep the cover that is peeled off in step 3 for use when you do not mount the speaker on a wall.

Connecting a TV Compatible with ARC/eARC

- 1 Connect the HDMI IN jack compatible with ARC/eARC on the TV and HDMI OUT (TV ARC/eARC) jack on the speaker system with the HDMI cable (supplied).

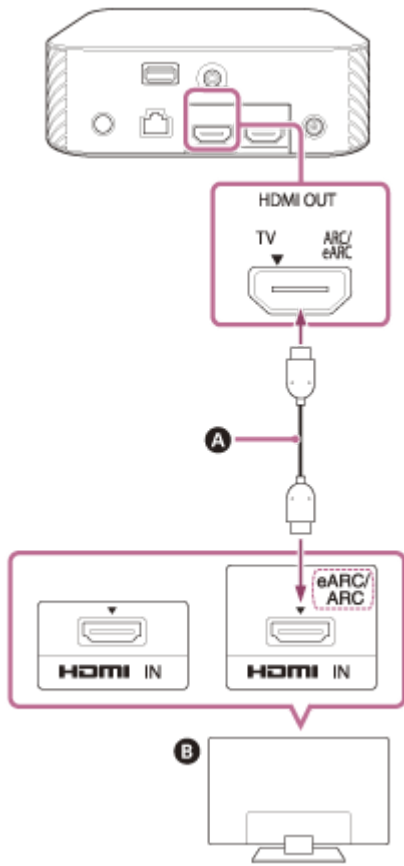

- A** HDMI cable (supplied)
- B** TV


Note

- Make sure that the connectors are firmly inserted.
- Enable the Control for HDMI function on the TV. If the Control for HDMI function on the TV is not enabled, TV sound will not be output from the speaker system.

When Your TV Has the S-CENTER SPEAKER IN Jack

You can output the center part of the speaker system sound from the TV by connecting the TV with the following method.

- 1 Connect the speaker system and TV with the HDMI cable (supplied).
- 2 Connect the S-CENTER SPEAKER IN jack on the TV and the S-CENTER OUT jack on the speaker system with the TV center speaker mode cable (supplied).

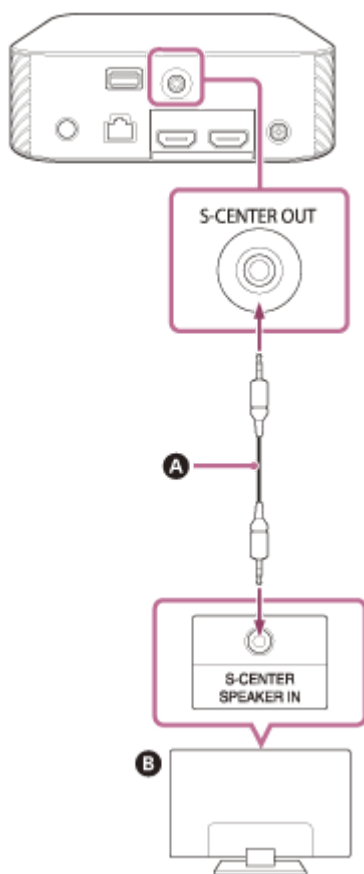

A TV center speaker mode cable (supplied)

B TV

Note

- Make sure that the connectors are firmly inserted.


Hint

- If the length of the TV center speaker mode cable is not sufficient, use a commercially available stereo mini cable.

Connecting an AV Device Compatible with the 2K/4K Video Format

You can output sound such as Dolby Atmos, Dolby TrueHD, and DTS:X in high quality by connecting an AV device to the speaker system.

- 1 Connect the HDMI OUT jack on the AV device and HDMI IN jack on the speaker system with an HDMI cable (not supplied).

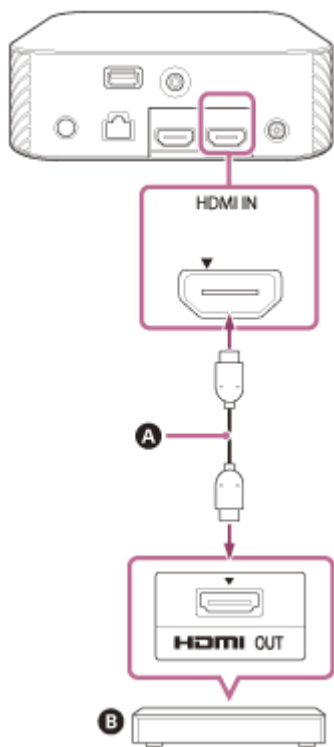

- A HDMI cable (not supplied)
- B Blu-ray Disc player, set-top box, gaming console, etc.

Note

- Make sure that the connectors are firmly inserted.

Hint

- If a TV is compatible with eARC, you can also output the high quality sound by connecting an AV device to the HDMI IN jack on the TV. In this case, enable the eARC function of the TV.
- Select the appropriate HDMI cable and [HDMI Signal Format] setting according to the video formats output from the device connected to the speaker system.

Related Topic

- [Supported HDMI Video Formats](#)


Connecting an AV Device Compatible with the 8K Video Format

When you connect an AV device with the following methods, you can play 8K video and high quality sound such as Dolby Atmos, Dolby TrueHD, or DTS:X.

- 1 Connect the speaker system and TV with the HDMI cable (supplied).
- 2 Check that the eARC compatible HDMI IN jack on the TV is compatible with the 8K video input.
Refer to the operating instructions of the TV.
- 3 Connect an AV device with one of the following methods.

When the eARC compatible HDMI IN jack on the TV supports the 8K video input:

Connect the HDMI IN jack on the speaker system and HDMI OUT jack on an AV device with an HDMI cable (not supplied).

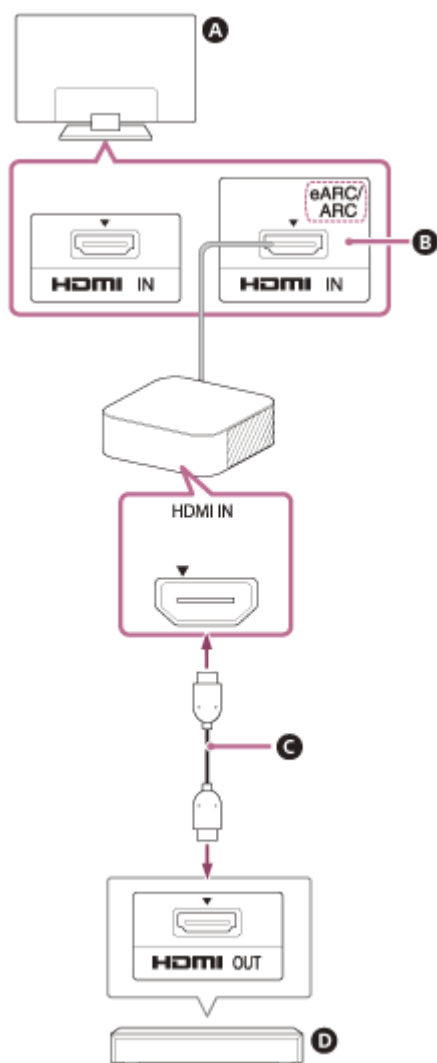


- A TV
- B Compatible with 8K video input
- C HDMI cable (not supplied)

D Blu-ray Disc player, set-top box, gaming console, etc.

When the eARC compatible HDMI IN jack on the TV does not support the 8K video input:

Connect the HDMI OUT jack on an AV device to the HDMI IN jack compatible with the 8K video input on a TV with an HDMI cable (not supplied).

Make sure that the eARC function of the TV is on.

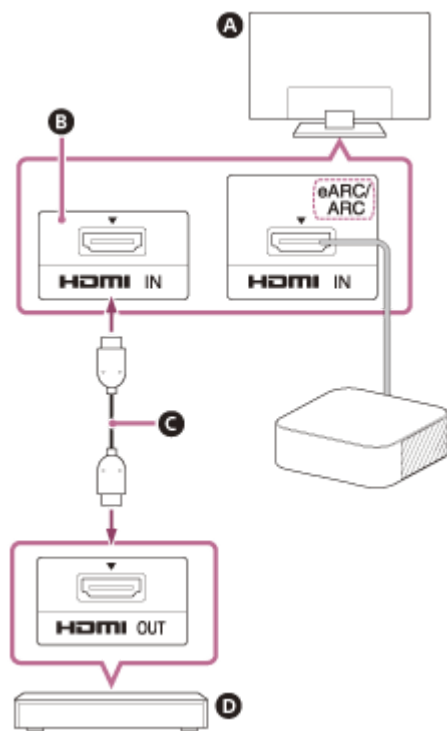

- A** TV
- B** Compatible with 8K video input
- C** HDMI cable (not supplied)
- D** Blu-ray Disc player, set-top box, gaming console, etc.

Note

- Make sure that the connectors are firmly inserted.

Hint

- Select the appropriate HDMI cable and [HDMI Signal Format] setting according to the video formats output from the device connected to the speaker system.

Related Topic


- [Connecting a TV Compatible with ARC/eARC](#)
- [Supported HDMI Video Formats](#)

Connecting to the AC Outlet (mains)


- 1 Connect the AC adaptor (supplied) and AC power cord (mains lead) (supplied)(*) to the DC IN terminal of the control box, then connect to the AC outlet (mains).

* Except for North American models

For North American models

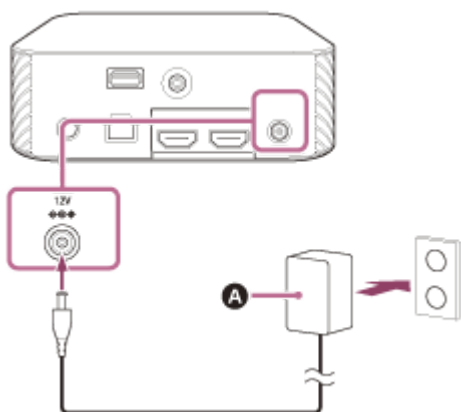


For other models

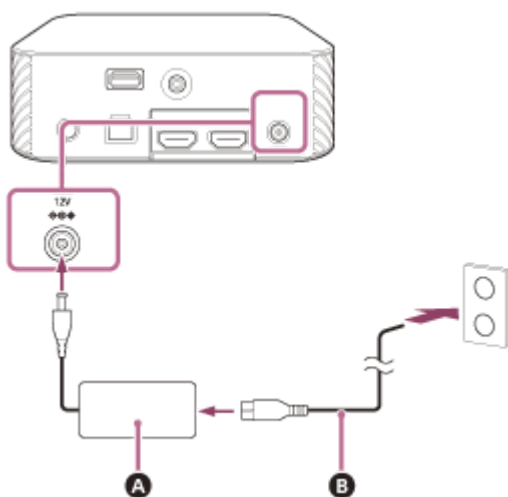

- A** AC adaptor (supplied)
- B** AC power cord (mains lead) (supplied)

- 2 Connect the AC power cords (mains leads) (supplied) to the AC inlets on four speakers, then connect to the AC outlets (mains).

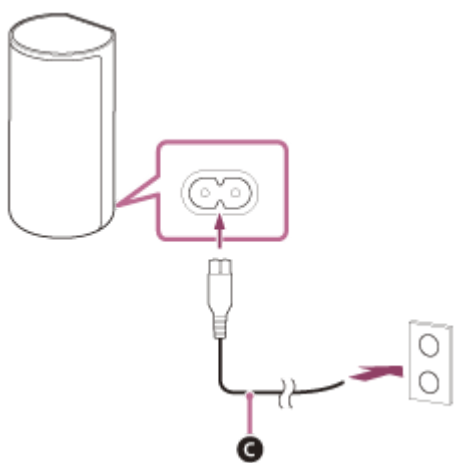


C AC power cord (mains lead) (supplied)

Performing Initial Settings

- 1 Press  (power) on the remote control supplied with the speaker system to turn on the speaker system.

Operate the remote control by pointing it toward the front of the control box.
When the speaker system turns on, [SETUP] appears in the front panel display.

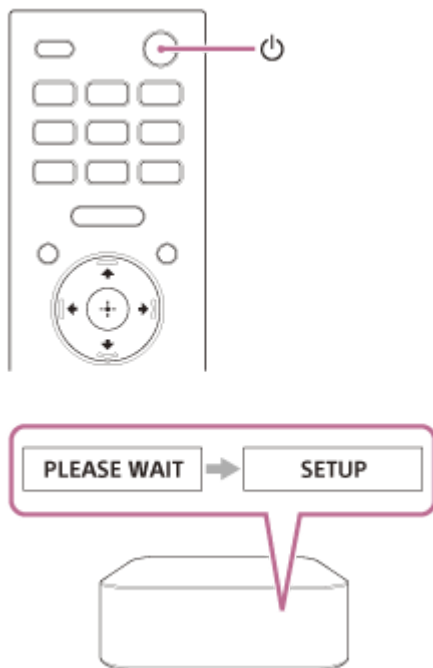

- 2 Turn on the TV.


If the [Speaker connection check] screen does not appear on the TV screen, change the TV input setting to the input that the speaker system is connected.

- 3 Check that the connection between the control box and four speakers is completed on the TV screen.


The control box and speakers are connected automatically.

The sound for connection completion is output after the check marks appear on all the speakers.

The power indicator of the speaker lights in green when connecting to the control box.

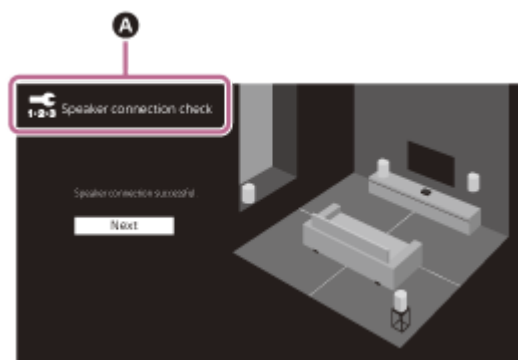

4 Perform initial settings by following the on-screen instructions.

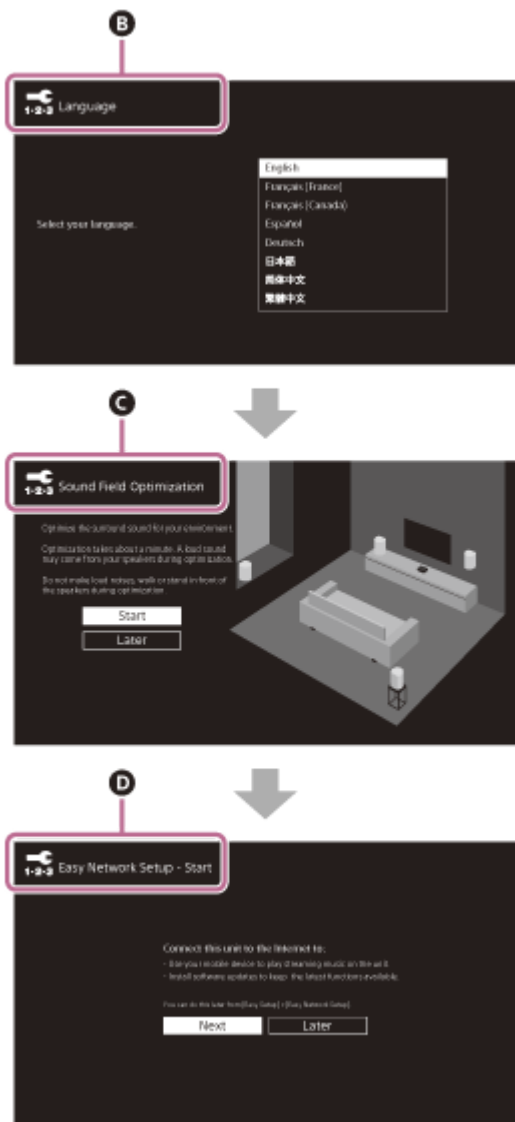

- B** [**1-2-3 Language**]
- C** [**1-2-3 Sound Field Optimization**]
- D** [**1-2-3 Easy Network Setup - Start**]

Once [Setup is complete.] appears, select [Finish].


Note

- Depending on the order in which you turn on the TV and the speaker system, the speaker system may be muted and [MUTING] is displayed on the front panel display of the speaker system. If this happens, turn all devices off, then turn on the speaker system after turning on the TV.
- During [Sound Field Optimization], a measuring sound is output for about 1 minute.
- The speaker system does not output sound until completing the wireless connection between the control box and four speakers.
- If the control box and speakers are not connected automatically in step 3, reset the speakers.

If the Speakers Are not Connected Correctly

The speakers are connected to the control box automatically when they are turned on.

If you use multiple speaker systems and want to specify the control box that is connected wirelessly to the speakers, perform the manual connection by following the steps below.

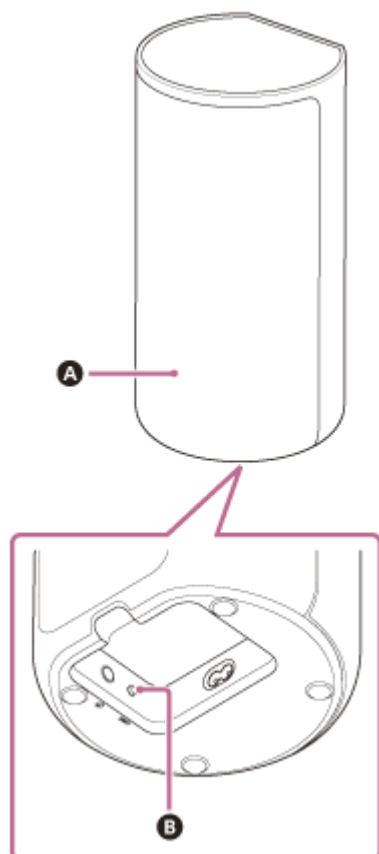

A Power indicator

B LINK

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Setup] - [Advanced Settings] on the home menu.

3 Select [Speaker Settings] - [Wireless Speaker Settings] - [Start manual linking].

The [Start manual linking] screen appears on the TV screen.

4 Press LINK on all the speakers.

The power indicators of the speakers flash twice repeatedly in green.

5 Select [Start].

The manual connection starts.

The connecting process appears on the TV screen.
To cancel the manual connection, select [Cancel].

6 When all the speakers display [Connected], select [Finish].

7 Press  (enter).

The manual connection is established and the power indicators of the speakers light in green.

Note

- If you perform [Start manual linking],  [Setup] - [Advanced Settings] - [Speaker Settings] - [Wireless Speaker Settings] - [Link mode] is set to [Manual] automatically.
- Only the speakers for which [Connected] has been displayed in step 6 connect to the control box. If the connection of the speakers cannot be established, perform the operation again from step 1.

Watching TV

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Watch] - [TV] on the home menu.**3 Select the program using the TV remote control.**

The selected TV program appears on the TV screen and the TV sound is output from the speaker system.

4 Adjust the volume.**Hint**

- You can select [TV] directly by pressing TV on the remote control.

Playing the Connected AV Device

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Watch] - [HDMI] on the home menu.

The image of the selected device appears on the TV screen and the sound is output from the speaker system.


3 Adjust the volume.**Hint**

- You can select [HDMI] directly by pressing HDMI on the remote control.

What You Can Do by Connecting a TV with the BLUETOOTH Function

When using Sony TV(*) with the BLUETOOTH function, you can listen to sound of the TV or device that is connected to the TV by connecting the speaker system and TV wirelessly.

* The TV needs to be compatible with A2DP (Advanced Audio Distribution Profile) of the BLUETOOTH profile.

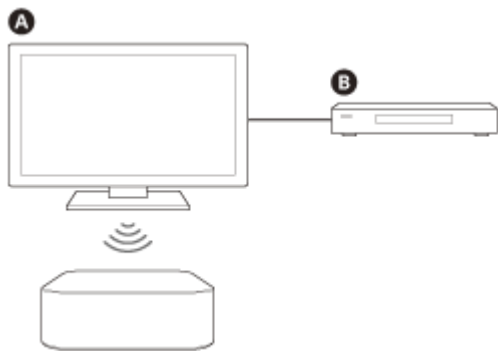

- A** Sony TV
- B** Blu-ray Disc player, set-top box, gaming console, etc.

Note

- If connecting the speaker system and TV by using the BLUETOOTH function, you cannot display the operation screen for the speaker system such as the home menu on the TV screen, and use functions of the speaker system other than the listening function for the sound of the TV or device that is connected to the TV.
To use all the functions of the speaker system, connect the speaker system and TV with the HDMI cable (supplied).


Related Topic

- [Connecting a TV Compatible with ARC/eARC](#)

Listening to TV Sound by Connecting the Speaker System and TV Wirelessly

You need to perform pairing of the speaker system and TV by using the BLUETOOTH function.


Pairing is the process required to mutually register the information on BLUETOOTH devices to be connected wirelessly in advance.

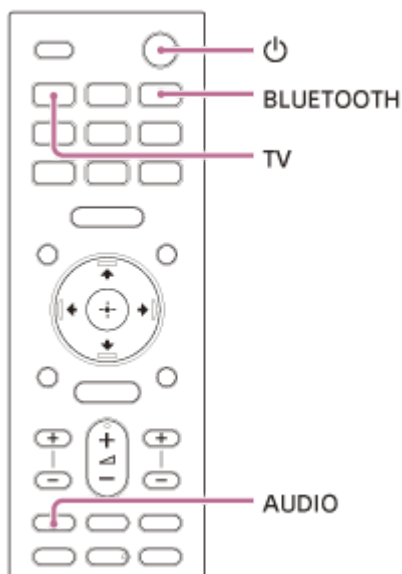

- 1 Turn on the TV.
- 2 Press  (power) to turn on the speaker system.
- 3 Press TV, AUDIO, then BLUETOOTH on the remote control in sequence.

- 4 Make sure that [PAIRING] appears in the front panel display.

The speaker system enters the BLUETOOTH pairing mode.

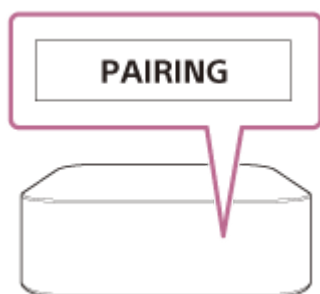

- 5 On the TV, search the speaker system by performing the pairing operation.

The list of the BLUETOOTH devices that are detected appears on the TV screen.

For the operation method to pair the BLUETOOTH device to the TV, refer to the operating instructions of the TV.

- 6 Pair the speaker system and TV by selecting "HT-A9" from the list on the TV screen.

7 Make sure that [TV (BT)] appears in the front panel display.

A connection between the speaker system and TV has been established.

8 Select the program or input of the device by using the TV remote control.

The sound of the displayed image on the TV screen is output from the speaker system.

9 Adjust the volume of the speaker system by using the TV remote control.

When pressing the muting button on the TV remote control, the sound is muted temporarily.

Note

- If the TV sound is not output from the speaker system, press TV and check the status of the front panel display.
 - [TV (BT)] appears in the front panel display: The speaker system and TV are connected, and TV sound is output from the speaker system.
 - [PAIRING] appears in the front panel display: Perform pairing on the TV.
 - [TV] appears in the front panel display: Perform steps from the start.
- When you connect the speaker system and TV with an HDMI cable, the BLUETOOTH connection is canceled. To connect the speaker system and TV with the BLUETOOTH function again, disconnect the HDMI cable, then perform the connecting operation from the start.

Listening to Sound of the Paired TV

1 Turn on the TV with the TV remote control.

The speaker system is turned on by interlocking with the TV power and TV sound is output from the speaker system.

2 Select the program or input of the device by using the TV remote control.

The sound of the displayed image on the TV screen is output from the speaker system.

3 Adjust the volume of the speaker system by using the TV remote control.


When pressing the muting button on the TV remote control, the sound is muted temporarily.

Hint

- When the TV is turned off, the speaker system is also turned off by interlocking with the TV power.

About operations with the remote control that is supplied with the speaker system

You can use the following buttons.

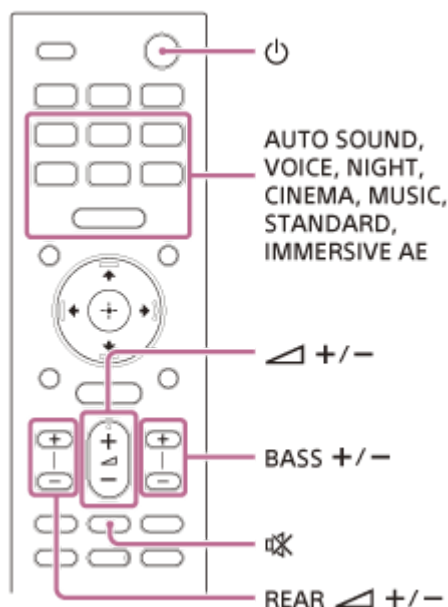


Note

- If you select the input other than TV on the remote control supplied with the speaker system, the TV sound is not output from the speaker system. To output the TV sound, press TV on the remote control to change to the TV input.
- While the TV is connected with the BLUETOOTH function, the following remote control buttons do not work.
 ▲ (up)/ ▼ (down)/ ◀ (left)/ ▶ (right), ⊕ (enter), BACK, HOME, DISPLAY, OPTIONS, ▶ || (play/pause), ◀◀ (previous)/ ▶▶ (next)

Listening to Music by Pairing the Mobile Device That Is Connected for the First Time


To use the BLUETOOTH function, you need to perform pairing of the speaker system and mobile device in advance.

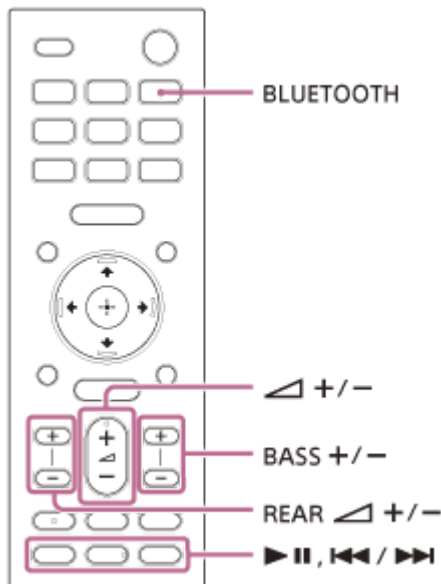

- 1 Press and hold the BLUETOOTH button for 2 seconds.

- 2 Make sure that [PAIRING] appears in the front panel display.

The speaker system enters the pairing mode.

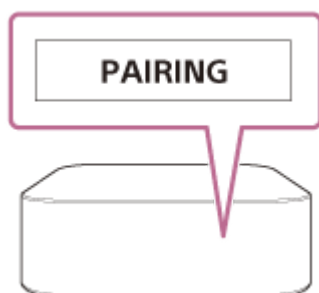

- 3 On the mobile device, search the speaker system by performing the pairing operation.

The list of the BLUETOOTH devices that are detected appears on the screen of the mobile device.
For the operation method to pair the BLUETOOTH device to the mobile device, refer to the operating instructions of the mobile device.

- 4 Pair the speaker system and mobile device by selecting "HT-A9" from the list on the screen of the mobile device.

If a passkey is requested, enter "0000."

- 5 Make sure that [BT] appears in the front panel display.

A connection between the speaker system and mobile device has been established.

6 Start audio playback with the music app on the connected mobile device.

Sound is output from the speaker system.

7 Adjust the volume.


You can play or pause the content by using the playback operation buttons on the remote control.

Hint

- If there is no mobile device that has been paired (ex. immediately after the purchase of the speaker system), the speaker system goes into pairing mode simply by changing the input to the BLUETOOTH input.
- Perform pairing for the second and subsequent mobile devices.

5-025-234-11(3) Copyright 2021 Sony Corporation

Listening to Music from the Paired Device

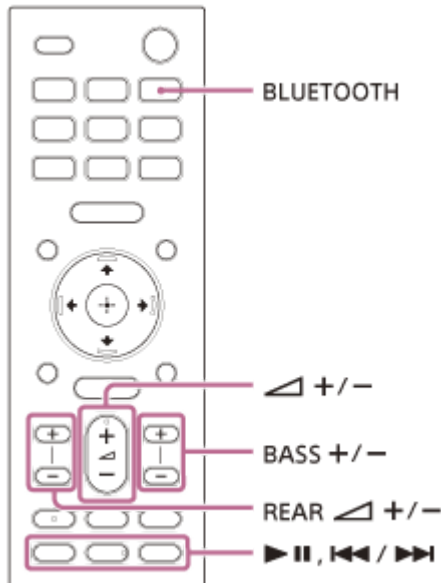

1 Turn the BLUETOOTH function of the mobile device to on.

2 Press the BLUETOOTH button.

The speaker system automatically reconnects to the mobile device it was most recently connected to.

3 Make sure that [BT] appears in the front panel display.

A connection between the speaker system and mobile device has been established.

4 Start audio playback with the music app on the connected mobile device.

Sound is output from the speaker system.

5 Adjust the volume.

You can play or pause the content by using the playback operation buttons on the remote control.

Note

- If sound delay occurs, it may be improved by setting  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Bluetooth Connection Quality] to [Priority on Stable Connection].

Hint

- When the connection is not established, select "HT-A9" on the mobile device.

To disconnect the mobile device

Perform any of the following items.

- Disable the BLUETOOTH function on the mobile device.
- Press the BLUETOOTH button while the [Bluetooth Audio] screen appears on the TV screen.
- Set  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Bluetooth Mode] to [Transmitter] or [Off].
- Turn off the speaker system or mobile device.

5-025-234-11(3) Copyright 2021 Sony Corporation

Listening to Sound by Pairing with Headphones

1 Set the BLUETOOTH compatible headphones to pairing mode.

Refer to the operating instructions of the headphones for the pairing method.

2 Press HOME.

The home menu appears on the TV screen.

3 Select [Setup] - [Advanced Settings] on the home menu.

4 Select [Bluetooth Settings] - [Bluetooth Mode] - [Transmitter].

The speaker system enters BLUETOOTH transmission mode.

5 Select the name of the headphones from the [Device List] in [Bluetooth Settings].

When the BLUETOOTH connection is established, [Connected] appears.

If you cannot find the name of your headphones in [Device List], select [Scan].

6 Return to the home menu, select [Watch] or [Listen], and select the input.

The image of the selected input appears on the TV screen, [BT TX] appears in the front panel display, then the sound is output from the headphones.

Sound from the speaker system is muted at the same time.

7 Adjust the volume.

Adjust the volume level of the headphones first. Then, adjust the volume level of the headphones with  (volume) +/- on the remote control.

To remove the paired headphones from the device list

1. Press HOME.

The home menu appears on the TV screen.

2. Select [Setup] - [Advanced Settings] on the home menu.

3. Select [Bluetooth Settings] - [Device List].

4. Move the cursor to the name of the headphones that you want to remove, and then press DISPLAY.

To remove all the paired headphones from the device list, press AUDIO.

5. Follow the on-screen instructions to remove the desired headphones from the device list.

Note

- To display the paired headphones on the device list, Set  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Bluetooth Mode] to [Transmitter].

Listening to Sound with Paired Headphones

1 Set the BLUETOOTH function of the headphones to on.

2 Press HOME.

The home menu appears on the TV screen.

3 Select  [Setup] - [Advanced Settings] on the home menu.

4 Select [Bluetooth Settings] - [Bluetooth Mode] - [Transmitter].

The speaker system enters BLUETOOTH transmission mode and the speaker system automatically reconnects to the headphones that was most recently connected to.

5 Return to the home menu, select  [Watch] or  [Listen], and select the input.

The image of the selected input appears on the TV screen, [BT TX] appears in the front panel display, then the sound is output from the headphones.

Sound from the speaker system is muted at the same time.

6 Adjust the volume.

Adjust the volume level of the headphones first. Then, adjust the volume level of the headphones with  (volume) +/- on the remote control.

To disconnect the paired headphones

Perform any of the following items.

- Disable the BLUETOOTH function on the headphones.
- Set  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Bluetooth Mode] to [Receiver] or [Off].
- Turn off the speaker system or headphones.
- Select the device name of the connected headphones from  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Device List].
[Connected] of the device name disappears.


About the Connection of the Headphones

- You may not be able to adjust the volume level depending on the BLUETOOTH compatible headphones.
- Input of BLUETOOTH is disabled when  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Bluetooth Mode] is set to [Off] or [Transmitter].
- You can register up to 9 BLUETOOTH devices. If a 10th BLUETOOTH device is registered, the oldest connected BLUETOOTH device will be overwritten by the new one.
- The speaker system can display up to 15 detected BLUETOOTH devices in the [Device List].
- You cannot change the sound effect or settings while transmitting sound to the BLUETOOTH compatible headphones.
- Playback of audio/music on the BLUETOOTH device is delayed compared to that on the speaker system due to the characteristics of BLUETOOTH wireless technology.
- You can enable or disable the reception of LDAC audio from the BLUETOOTH device in [Bluetooth Settings].

What You Can Do by Connecting the Speaker System to a Network

You can perform streaming playback of music content via the speaker system by operating a smartphone, tablet, or iOS device, or play music stored on a computer via the speaker system by connecting to the network.

The Wi-Fi port and LAN(100) port of the speaker system have a router function which can forward audio data to another Sony audio product.

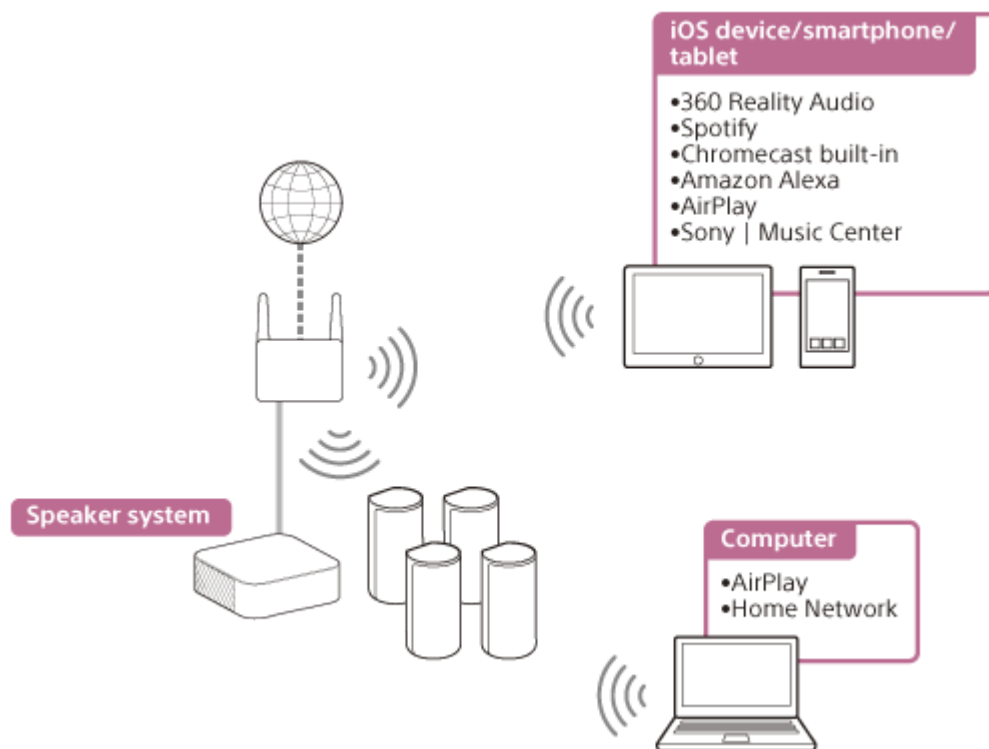

- **360 Reality Audio**

You can play 360 Reality Audio contents on the speaker system by selecting it on the streaming service app compatible with 360 Reality Audio.

- **Spotify**

You can select music on the Spotify app and play it on the speaker system.

Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how.

- **Chromecast built-in™**

You can select music on the Chromecast-enabled app and play it on the speaker system.

- **Amazon Alexa**

You can perform voice control such as music playback, going to the next/previous song, volume adjustment, etc. on the streaming service by using the speaker system in combination with the Alexa built-in device (not supplied).

- **AirPlay**

The speaker system supports AirPlay. You can play music on the speaker system by operating an iOS device or a computer.

- **Sony | Music Center**

You can control the speaker system wirelessly by installing the “Sony | Music Center” app on your smartphone or tablet device.

- **Home Network**

You can play music files stored on your computer on a network location via your home network.

Note

- The server needs to be connected to the same network as that of the speaker system.

Related Topic

- [Enjoying 360 Reality Audio](#)
- [Using Spotify](#)
- [Streaming Music with Chromecast built-in](#)
- [Operating the Speaker System by Talking to an Alexa Built-in Device](#)
- [Streaming Music with an iOS Device](#)
- [Using Sony | Music Center](#)
- [Listening to Music on your PC via a Home Network](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

Setting up a Wireless Network Connection on the Home Menu

Check the following information in advance.

- The network name (SSID)(*)
- The security key (password)(**)

* SSID (Service Set Identifier) is a name that identifies a particular access point.

** This information should be available from a label on your wireless LAN router/access point, from the operating instructions, from the person who set up your wireless network, or from the information provided by your Internet service provider.

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Setup] - [Advanced Settings] on the home menu.

3 Select [Network Settings].

Make sure that [Wi-Fi Connection] is set to [On].

4 Select [Internet Settings] - [Next].

5 Select [Search for Wi-Fi network].

The list of network names appears on the TV screen.

6 Select the desired network name (SSID).

When connecting to a network that does not appear in the list, select [New connection registration] and follow the on-screen instructions.

7 Enter the security key (or password) using the software keyboard, and then select [Enter].

The speaker system starts connecting to the network.

Home Theatre System
HT-A9

Setting up a Wireless Network Connection Using Sony | Music Center

Sony | Music Center can connect the speaker system to the same wireless network as that of the mobile device. For details, follow the instruction of the app or refer to the following URL.

<https://www.sony.net/smcqa/>

5-025-234-11(3) Copyright 2021 Sony Corporation

Setting up a Wi-Fi Connection Using an iOS Device

The speaker system is compatible with Apple Setup.

Using this function, you can connect the speaker system to the same network that connects your iOS device via Wi-Fi without entering the network name and password.

1 Press HOME on the remote control supplied with the speaker system.

The home menu appears on the TV screen.

2 Select [Setup] - [Advanced Settings] on the home menu.

3 Select [Network Settings].

Make sure that [Wi-Fi Connection] is set to [On].


4 Select [Internet Settings] - [Next].

5 Select [Use Apple Setup].

6 Operate the iOS device by following the on-screen instructions.

Connecting to a PC or Router with a LAN Cable

The following illustration is the example for connection of the speaker system and PC to your home network.

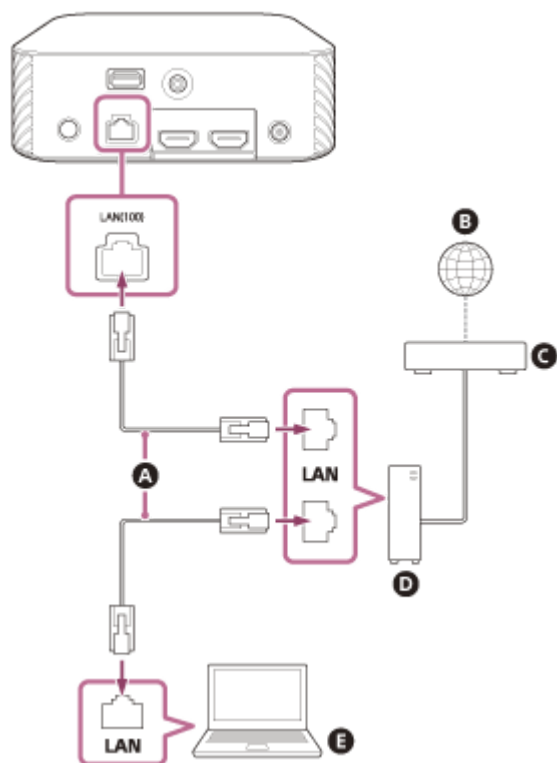

- A** LAN cable (not supplied)
- B** Internet
- C** Modem
- D** Router
- E** PC

Note

- The PC needs to be connected to the same network as that of the speaker system.

Hint

- We recommend that you use a shielded straight interface cable (not supplied).

Setting up a Wired Connection

- 1 Use a LAN cable to connect the speaker system to a router.
- 2 Press HOME.
The home menu appears on the TV screen.
- 3 Select  [Setup] - [Advanced Settings] on the home menu.
- 4 Select [Network Settings] - [Internet Settings] - [Next].
- 5 Select the IP address setting method.
 - [Auto]: Obtains an IP address automatically.
 - [Manual]: Enter an IP address manually.
- 6 If you select [Manual], perform the setting by following the on-screen instructions.
The speaker system starts network settings.
- 7 When the network setting status appears, press  (up)/  (down) to browse information, and then press  (right).

Note

- If you select IPv6, you cannot use a fixed IP address.

Enjoying 360 Reality Audio

The speaker system is compatible with 360 Reality Audio.

You can play 360 Reality Audio contents on the speaker system by selecting it on the streaming service app compatible with 360 Reality Audio.

For details about 360 Reality Audio, refer to the following URL.

<https://www.sony.net/360RA/>

To prepare the speaker system and mobile device, check the 360 Reality Audio compatible streaming service on the speaker system, then install the suitable app to the mobile device.

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Listen] - [360 Reality Audio] on the home menu.

You can check the 360 Reality Audio compatible streaming service that is available in your country/region by following the on-screen instructions.

Note

- [360 Reality Audio] does not appear if there is no 360 Reality Audio compatible streaming service.

3 Install the streaming service app compatible with 360 Reality Audio to the mobile device.

4 Connect the mobile device by Wi-Fi to the same network as that of the speaker system.

5 Start the streaming service app compatible with 360 Reality Audio, tap the cast button, and select the speaker system.

6 Select 360 Reality Audio contents on the streaming service app and play it.

The music is played on the speaker system.

Note

- 360 Reality Audio contents cannot be played with the BLUETOOTH connection.

Hint

- If [Network/Bluetooth Standby] is set to [On], you can play music quickly even when the speaker system is in standby mode.
- An image such as an album cover appears in the playback screen if the played content supports the feature.

Related Topic

- [\[System Settings\]](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

Home Theatre System
HT-A9

Using Spotify

You can select music on the Spotify app and play it on the speaker system.

Playing music on the speaker system by using the “Spotify Connect” function

Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how.

Hint

- If [Network/Bluetooth Standby] is set to [On], you can play music quickly even when the speaker system is in standby mode.
- An image such as an album cover appears in the playback screen if the played content supports the feature.

Resuming music that has been played on the mobile device

1 Press MUSIC SERVICE.

When you have played music on Spotify on the speaker system, the music that was played with Spotify is resumed.

Note

- The Spotify app may not be available in some countries/regions.

Related Topic

- [\[System Settings\]](#)

Streaming Music with Chromecast built-in

The speaker system is compatible with Chromecast built-in, which can stream music to the speaker from the mobile device.

You can select music content from a Chromecast-enabled app and play audio content on the speaker system or group that includes the speaker system.

Controlling your music with a mobile device

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Listen] - [Chromecast built-in] on the home menu.

Follow the steps that appear on the screen.

After performing the settings, [Network/Bluetooth Standby] is set to [On] automatically and you can play music quickly even when the speaker system is in standby mode.

3 Install your favorite Chromecast-enabled app on your mobile device.

4 Connect the mobile device by Wi-Fi to the same network as that of the speaker system.

5 Launch a Chromecast-enabled app, tap the cast button, and select the speaker system or group that the speaker system is included in.



6 Select and play music on the Chromecast-enabled app.

The music is played on the speaker system.

Play and Control your Music with Google Assistant

This speaker system is compatible with a Google Assistant-enabled device with Chromecast built-in so you can control your music with your voice. Simply link the speaker system to the Google Home app on your mobile device. For details, refer to the Google Home app.

Note

- Depending on the country and region, Chromecast built-in and the Chromecast-enabled app may not be provided.
- Depending on the usage environment or playback content, sound interruptions may occur.

Hint

- An image such as an album cover appears in the playback screen if the played content supports the feature.

Related Topic

- [\[System Settings\]](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

Operating the Speaker System by Talking to an Alexa Built-in Device

Alexa is Amazon's cloud-based voice service. You can play the sound on the speaker system by talking to an Alexa built-in device.

To use this function, you will need to connect your Amazon account to the Alexa built-in device.

To prepare the speaker system and mobile device, connect the mobile device by Wi-Fi to the same network as that of the speaker system, and register the speaker system to an Amazon account.

Preparing the speaker system and mobile device

- 1 Connect the mobile device by Wi-Fi to the same network as that of the speaker system.
- 2 Install the free Sony | Music Center app on your mobile device.
- 3 Start Sony | Music Center and select the speaker system.
- 4 Perform the setting for voice operation by following the Sony | Music Center screen.

Sound that can be played on the speaker system by talking to an Alexa built-in device

You can perform voice control such as music playback, going to the next/previous song, volume adjustment, etc. on the streaming service by using the speaker system in combination with an Alexa built-in device (not supplied).

You cannot perform voice control by using the speaker system alone.

Note

- This function is not available in some countries/regions.
- Alexa skills that need user responses are not available on the speaker system because the speaker system does not have a microphone.
- You cannot use all the functions of Amazon Alexa on the speaker system.

Hint

- Use Sony | Music Center to deregister the speaker system from the Amazon account. Even if you deregister an account on the Alexa app, the speaker system will not recognize that the account has been deregistered.
- An image such as an album cover appears in the playback screen if the played content supports the feature.

Home Theatre System
HT-A9

Streaming Music with an iOS Device

The speaker system is compatible with AirPlay 2. You can select music content on an iOS device such as iPhone, iPad, and iPod touch and stream it to the speaker system.

- 1 **Connect the iOS device by Wi-Fi to the same network as that of the speaker system.**
- 2 **Play the music you want to stream on the iOS device.**
- 3 **Display the AirPlay icon () on the iOS device and tap it.**
- 4 **Select the speaker system as the speaker to stream to on the iOS device.**

The music is played on the speaker system.

Hint

- You can also select other speakers at the same time as the speaker system, and stream music through multiple speakers.

Streaming music on the speaker system by talking to Siri

If you add the speaker system to the Home app on the iOS device, you can stream music to the speaker system by talking to Siri.

Note

- Since the speaker system does not have a microphone, you cannot talk to the speaker system to operate it.
- Not all features of Siri are available on the speaker system.

Home Theatre System
HT-A9

Using Sony | Music Center

Sony | Music Center is an application for controlling compatible Sony audio devices using the mobile device such as a smartphone or tablet.

For details about Sony | Music Center, refer to the following URL.

<https://www.sony.net/smcqa/>

- 1 Install the free Sony | Music Center app on your mobile device.
- 2 Connect the mobile device via Wi-Fi to the same network as that of the speaker system.
- 3 Start Sony | Music Center.
- 4 Operate by following the Sony | Music Center screen.

Note

- Use Sony | Music Center of the latest version. If you cannot connect the speaker system and a BLUETOOTH device via the BLUETOOTH function, uninstall Sony | Music Center and try to connect via the BLUETOOTH function again.

Hint

- Connect the mobile device to the same network as that of the speaker system.

Related Topic

- [Setting up a Wireless Network Connection on the Home Menu](#)
- [Setting up a Wireless Network Connection Using Sony | Music Center](#)
- [Setting up a Wi-Fi Connection Using an iOS Device](#)
- [Connecting to a PC or Router with a LAN Cable](#)
- [Setting up a Wired Connection](#)

Listening to Music on your PC via a Home Network

You can play music files stored on your PC via your home network.

Music files can be played by operating Sony | Music Center on a mobile device such as a smartphone or tablet.



- A** PC
- B** Wireless LAN router
- C** Smartphone or tablet

1 Connect the speaker system to a network.

2 Connect the PC to a network.

For details, refer to the operating instructions of the PC.

3 Set the PC.

To use the PC on your home network, you need to set the PC as the server. For details, refer to the operating instructions of the PC.

4 Listen to music on a PC by using Sony | Music Center.

You can play music files stored on the PC by operating Sony | Music Center that is installed to a mobile device such as a smartphone or tablet. For details of Sony | Music Center, refer to the following URL.

<https://www.sony.net/smcqa/>

Hint

- See  [Setup] - [Advanced Settings] - [Network Settings] - [Network Connection Status] when checking the network connection status.


Related Topic

- [Setting up a Wireless Network Connection on the Home Menu](#)
- [Setting up a Wireless Network Connection Using Sony | Music Center](#)
- [Setting up a Wi-Fi Connection Using an iOS Device](#)
- [Connecting to a PC or Router with a LAN Cable](#)
- [Setting up a Wired Connection](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

Home Theatre System
HT-A9

Adjusting the Volume

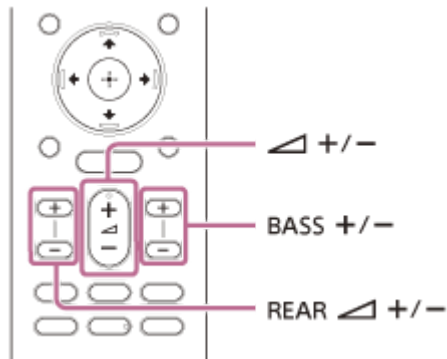

To adjust the speaker system volume

Press  (volume) +/-.

The volume level appears in the front panel display.

To adjust the bass sound volume

Press BASS (bass sound volume) +/-.

The volume level appears in the front panel display.

Note

- The subwoofer is designed for playback of bass or low frequency sound. When the input source, such as in TV programs, does not contain much bass sound, the bass sound from the subwoofer may be difficult to hear.

To adjust the rear speaker volume

Press REAR  (rear speakers volume) +/-.


The volume level appears in the front panel display.

Note

- The rear speakers are designed for playback of the surround part of the multi-channel sound and surround sound that is created from the 2-channel sound using virtual processing. When the input source does not contain much surround sound, the surround sound from the rear speakers may be difficult to hear.

Enjoying Immersive Surround Experience (IMMERSIVE AE)

You can feel immersed by the sound from not only the horizontal direction, but also from the upward direction by working sound modes effectively. This function also works for the 2.0 channel signal such as TV programs.

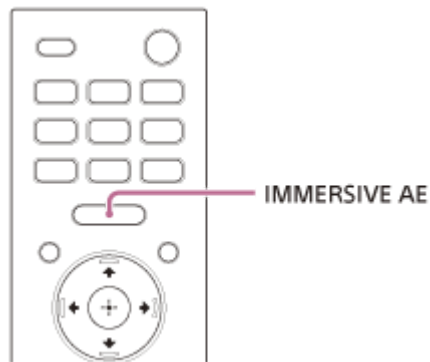

1 Press IMMERSIVE AE to set the function on or off.

The Immersive Audio Enhancement setting appears on the TV screen.

- **[Immersive Audio Enhancement: On]:** Activates the Immersive Audio Enhancement function.
- **[Immersive Audio Enhancement: Off]:** Deactivates the Immersive Audio Enhancement function.


Note

- The Immersive Audio Enhancement function is available only when  [Setup] - [Advanced Settings] - [Audio Settings] - [Sound Effect] is set to [Sound Mode On].
- The surround effect from all directions differs depending on the sound source.
- The Immersive Audio Enhancement setting does not appear on the TV screen while the TV input is selected. In this case, you can check the Immersive Audio Enhancement setting in the front panel display.
- Depending on the source, this setting is fixed and cannot be changed.

Setting the Sound Effect That Is Tailored to Sound Sources (Sound Mode)

You can easily enjoy pre-programmed sound effects that are tailored to different kinds of sound sources.

This function works when  [Setup] - [Advanced Settings] - [Audio Settings] - [Sound Effect] is set to [Sound Mode On].

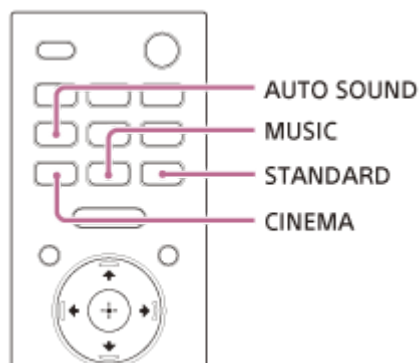

1 Press **AUTO SOUND**, **CINEMA**, **MUSIC**, or **STANDARD** to select the sound mode.


The selected sound mode appears on the TV screen.

- **[Auto Sound]:** The appropriate sound setting is automatically selected for the sound source.
- **[Cinema]:** You feel immersed by the sound that travels behind you and surrounds your entire body. This mode is suitable for watching movies.
- **[Music]:** Vividness and glossiness of the sound are expressed in detail. This mode is suitable for enjoying music in a way that moves you.
- **[Standard Surround]:** The sound of a TV program can be heard clearly.

Note

- The sound mode function is disabled in the following conditions.
 - Chromecast built-in is used.
 - AirPlay is used.
 - The BLUETOOTH device is connected in BLUETOOTH transmission mode.
 - A test tone is emitted.
- The sound mode does not appear on the TV screen while the TV input is selected. In this case, you can check the sound mode in the front panel display.
- Depending on the combination of the sound mode setting and sound source, the effect of [Sound Field Optimization] may not be applied.

Making Dialogs Clearer (VOICE)

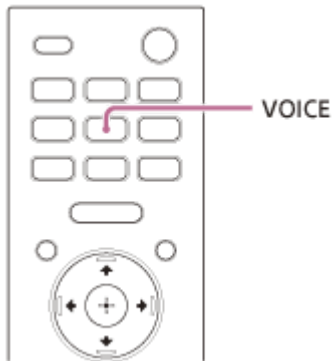

1 Press VOICE to set the function on or off.


The voice mode setting appears on the TV screen.

- **[Voice: On]:** Dialog is easily heard by enhancing dialog range.
- **[Voice: Off]:** Deactivates the voice mode function.

Note

- The voice mode setting does not appear on the TV screen while the TV input is selected. In this case, you can check the voice mode setting in the front panel display.
- When the BLUETOOTH device is connected in BLUETOOTH transmission mode, the voice mode is disabled.

Enjoying Clear Sound with Low Volume at Midnight (NIGHT)

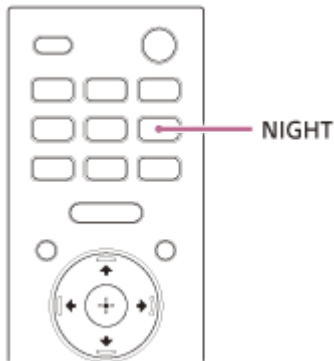

1 Press NIGHT to set the function on or off.


The night mode setting appears on the TV screen.

- **[Night: On]:** Sound is output at low volume with minimum loss of fidelity and clarity of dialog.
- **[Night: Off]:** Deactivates the night mode function.

Note

- When you turn the speaker system off, this setting is set to [Night: Off] automatically.
- The night mode setting does not appear on the TV screen while the TV input is selected. In this case, you can check the night mode setting in the front panel display.
- When the BLUETOOTH device is connected in BLUETOOTH transmission mode, the night mode is disabled.

When Watching the TV

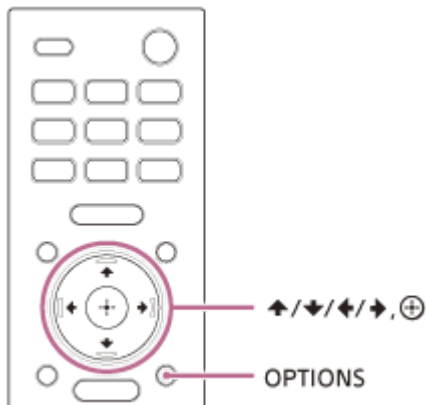

- 1 Press OPTIONS.**


[SYNC] appears in the front panel display.
- 2 Press → (right) or ⊕ (enter).**

The adjusting time appears in the front panel display.
- 3 Adjust the delay using ↑ (up)/ ↓ (down), then press ⊕ (enter).**

You can adjust from 0 msec to 300 msec in 25 msec increments.
- 4 Press OPTIONS.**

The options menu in the front panel display turns off.

When Watching Another Device

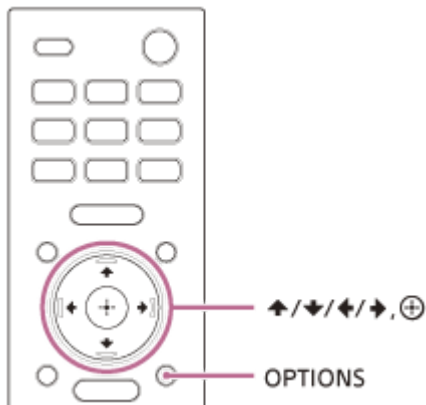


- 1 **Press OPTIONS.**
The options menu appears on the TV screen.
- 2 **Select [A/V sync].**
- 3 **Adjust the delay using ↑ (up)/ ↓ (down), then press ⊕ (enter).**
You can adjust from 0 msec to 300 msec in 25 msec increments.

Hint

- If your TV has a function that adjusts the delay between the picture and sound, use it for adjustment. For details, refer to the operating instructions of the TV.

Enjoying Multiplex Broadcast Sound (AUDIO)

You can enjoy multiplex broadcast sound when the speaker system receives a Dolby Digital multiplex broadcast signal.

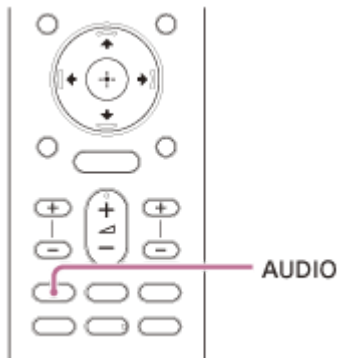

1 Press AUDIO repeatedly to select the desired audio signal.

The audio signal appears on the TV screen.

- **[Audio: Main]:** Sound of the main language is output.
- **[Audio: Sub]:** Sound of the sub language is output.
- **[Audio: Main/Sub]:** Main sound is output from the left speaker and sub sound is output from the right speaker.

Note

- To output Dolby Digital sound, you need to connect the TV that is compatible with eARC or ARC to the HDMI OUT (TV ARC/eARC) jack with the HDMI cable (supplied), or other devices to the HDMI IN jack with an HDMI cable (not supplied).
- The audio signal does not appear on the TV screen while the TV input is selected. In this case, you can check the audio signal in the front panel display.


Related Topic

- [Connecting a TV Compatible with ARC/eARC](#)

When Watching the TV

By adjusting the dialog volume, you can easily listen to dialog since it stands out from the ambient noise. This function works while playing content that is compatible with the DTS:X dialog control function.

The setting method differs depending on the input.

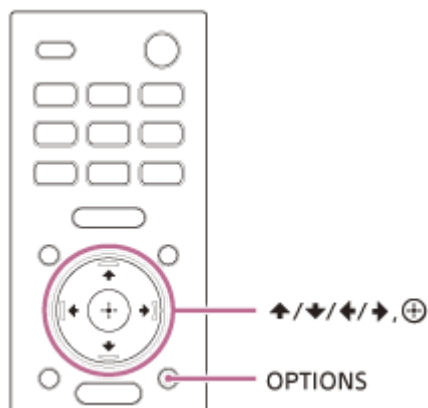

1 Press OPTIONS, display [DIALOG] in the front panel display using ↑ (up)/ ↓ (down), then press ⊕ (enter).

2 Adjust the dialog volume using ↑ (up)/ ↓ (down), then press ⊕ (enter).

You can adjust from 0.0 dB to 6.0 dB in 1.0 dB increments.

3 Press OPTIONS.


The options menu in the front panel display turns off.

Home Theatre System
HT-A9

When Playing Content on an AV Device

By adjusting the dialog volume, you can easily listen to dialog since it stands out from the ambient noise. This function works while playing content that is compatible with the DTS:X dialog control function.

The setting method differs depending on the input.

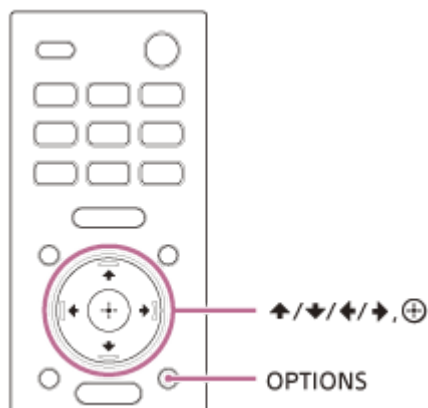

1 Press OPTIONS.

The options menu appears on the TV screen.

2 Select [DTS Dialog Control].

3 Adjust the dialog volume using ↑ (up)/ ↓ (down), then press ⊕ (enter).

You can adjust from 0.0 dB to 6.0 dB in 1.0 dB increments.

Operating the Speaker System by Interlocking with a TV (Control for HDMI Function)

Connecting a TV compatible with the Control for HDMI function using an HDMI cable enables you to interlock the speaker system operation such as power on/off or volume adjustment with a TV.

About the Control for HDMI function

The Control for HDMI function is a function that enables operation of devices connected with an HDMI (High-Definition Multimedia Interface) cable by interlocking them.

Although this function works for devices compatible with the Control for HDMI function, it may not work if connecting devices other than those manufactured by Sony.

Preparing to operate by interlocking with a TV

Enable the Control for HDMI function settings of the TV connected to the speaker system with an HDMI cable. The default setting of the Control for HDMI function of the speaker system is [On].

Hint

- When connecting a device such as a Blu-ray Disc player to a TV with an HDMI cable, enable its Control for HDMI function.
- To enable the Control for HDMI function of a TV or Blu-ray Disc player, refer to their operating instructions.
- If you enable the Control for HDMI ("BRAVIA" sync) function when using a TV manufactured by Sony, the Control for HDMI function of the speaker system is also enabled automatically. When the setting is complete, [DONE] appears in the front panel display.

Performing power operation or volume adjustment by a TV remote control

When turning the TV on/off or adjusting the volume using the TV remote control, the speaker system power operation or volume adjustment is interlocked.



- A** TV
- B** TV remote control

Power interlocking

When you turn on or off the TV, the speaker system will turn on or off automatically.

Note

- If you turn off the speaker system before turning off the TV, the speaker system may not turn on automatically even though you turn on the TV next time. In this case, perform the following operation.
 - Select the speaker system for the sound output device in the TV menu.
 - When using Sony TV, turn on the speaker system while the TV is turned on.

Volume adjustment

The sound of the TV you are watching is output from the speaker system automatically. You can adjust the speaker system volume by the TV remote control.

Other interlocking functions

Menu operation by TV remote control

You can operate the menu of the speaker system by selecting the name of the speaker system when changing input or operating the Sync Menu on the TV.

Note

- Some Sony TVs support the Sync Menu. Refer to the operating instructions of your TV to see if your TV supports the Sync Menu.

Language follow

When you change the language for the on-screen display of the TV, the speaker system's on-screen display language is also changed.

One-touch play function

When you play content on a Blu-ray Disc player or "PlayStation®4," etc. connected to the TV, the speaker system and TV are turned on automatically.

Hint

- You can change the Control for HDMI settings by selecting  [Setup] - [Advanced Settings] - [HDMI Settings] on the home menu.

Operating the Speaker System by Interlocking with a TV Compatible with the “BRAVIA” Sync Function

“BRAVIA” Sync is an extended function developed by Sony based on the Control for HDMI function. By connecting “BRAVIA” Sync-compatible devices such as a TV or a Blu-ray Disc player using an HDMI cable, you can control the devices by interlocking them with each other.

To use “BRAVIA” Sync

“BRAVIA” Sync is enabled by enabling the Control for HDMI function of the Sony device.

What you can do with “BRAVIA” Sync

Control for HDMI function

- Power interlocking
- Volume adjustment
- Menu Operation by TV Remote Control
- Language Follow
- One-Touch Play Function

Sound mode/Scene Select function

The sound mode of the speaker system is automatically switched according to the setting of the TV's Scene Select function or sound mode. To use this function, you need to set the sound mode to [Auto Sound].

Home Theatre Control function


Setting the speaker system, setting the sound mode settings, input switching, etc. can be done without switching the TV input.

Related Topic

- [Operating the Speaker System by Interlocking with a TV \(Control for HDMI Function\)](#)

Changing the Brightness of the Front Panel Display and Indicators (DIMMER)

You can change the brightness of the front panel display and power indicator of the speaker. The brightness of the power indicator for the optional subwoofer also changes.

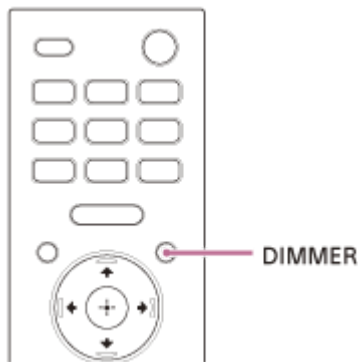

1 Press DIMMER repeatedly to select the desired display mode.

The display mode appears on the TV screen.

- **[Dimmer: Bright]:** The front panel display and indicators light brightly.
- **[Dimmer: Dark]:** The front panel display and indicators light darkly.
- **[Dimmer: Off]:** The front panel display and indicators are turned off.

Note

- The front panel display and indicators are turned off when [Dimmer: Off] is selected. They turn on automatically when you press any button, then turn off again if you do not operate the speaker system for about 10 seconds. However, in some cases, the front panel display and indicators may not turn off. In this case, the brightness of the front panel display and indicators are the same as [Dimmer: Dark].
- The display mode does not appear on the TV screen while the TV input is selected. In this case, you can check the display mode in the front panel display.

Home Theatre System
HT-A9

Saving Power in Standby Mode

Check that you have made the following settings:

-  [Setup] - [Advanced Settings] - [HDMI Settings] - [Standby Through] is set to [Off].
-  [Setup] - [Advanced Settings] - [System Settings] - [Network/Bluetooth Standby] is set to [Off].

Performing Easy Setup

You can make basic initial settings, speaker settings, and network settings for the speaker system easily by performing Easy Setup.

- 1 Press HOME.**

The home menu appears on the TV screen.
- 2 Select  [Setup] - [Easy Setup] on the home menu.**

The [Easy Setup] screen appears on the TV screen.
- 3 Select the desired setting.**
 - **[Easy Initial Setup]:** Performs the basic initial settings including the speaker settings and network settings.
 - **[Easy Sound Setup]:** Performs the basic speaker settings for optimizing the surround sound for your environment.
 - **[Easy Network Setup]:** Performs the basic network settings.
- 4 Perform settings by following the on-screen instructions.**

Using the [Advanced Settings] Menu

You can make various adjustments to items such as picture and sound on the [Advanced Settings] menu.

1 Press HOME.

The home menu appears on the TV screen.

2 Select [Setup] - [Advanced Settings] on the home menu.

The [Advanced Settings] screen appears on the TV screen.

3 Select the setting item.

-  **[Speaker Settings]**: Makes the speakers settings for installing and connections.
-  **[Audio Settings]**: Makes the audio output settings.
-  **[HDMI Settings]**: Makes the HDMI settings.
-  **[Bluetooth Settings]**: Makes detailed settings for the BLUETOOTH function.
-  **[System Settings]**: Makes the speaker system-related settings.
-  **[Network Settings]**: Makes detailed settings for the Internet.
-  **[Resetting]**: Resets the speaker system to the factory default settings.
-  **[Software Update]**: Updates the software of the speaker system or optional subwoofer.

[Speaker Settings]

[Sound Field Optimization]

This function automatically measures the positions of the four speakers and the distance from each speaker to the ceiling, and optimizes the surround sound quality to suit your environment.

Follow the on-screen instructions to start the measurements. During the optimization, the speakers will make a sound for about a minute.

Note

- Do not make loud noises, walk or stand in front of the speakers during optimization.

[Manual Speaker Settings]

You can set the speaker placement in relation to the TV or set the listening position to obtain the best possible surround sound.

- **[Sound Field Adjustment]**

[Direction of sound field]: Set the positional relationship between the front speakers and the TV, and between the speakers and the listening position by following on-screen instructions. This is to adjust the direction where you can hear sounds such as dialogue to improve the sense of unity between the image and sound, and to adjust the direction and balance to improve realism of the sound.

[Height of sound field]: Adjust the height of the sound field.

[Sound from subwoofer](^{*}): Select the distance from the listening position to the optional subwoofer. This is to adjust the timing of the subwoofer sound according to the distance.

^{*} This item appears when using the optional subwoofer.

- **[Test Tone]**

The test tone is emitted from the speakers for checking the available speakers.

[On]: The test tone is emitted from the speaker.

[Off]: The test tone is not emitted from the speakers.

[Wireless Speaker Settings]

You can adjust various items related to wireless connection between the speaker system and optional subwoofer.

- **[Link mode]**

You can set the connection method for the optional subwoofer.

[Auto]: Connects the optional subwoofer to the speaker system automatically.

[Manual]: Connects the four supplied speakers and optional subwoofer manually.

- **[Start manual linking]**

Perform manual connection between the four supplied speakers or optional subwoofer and the control box. For details, see “ [If the Speakers Are not Connected Correctly](#) ” or refer to the operating instructions supplied with the optional subwoofer.

- **[Check wireless connection]**

You can check the connection status of the four supplied speakers and optional subwoofer.

- **[RF Channel]**

You can minimize interference with other wireless devices.

[On]: Normally select this. The speaker system automatically selects the better channel for transmission. This is the stronger mode for wireless interference.

[Off]: The speaker system selects a channel from the limited frequency band to prevent external wireless interference. If sound dropping occurs while [On] is selected, it may be improved by selecting [Off].

- **[Wireless Playback Quality]**

You can set the wireless playback quality of the four supplied speakers and optional subwoofer.

[Sound Quality]: The sound quality takes priority over the connection status of the wireless connection.

[Connection]: The connection status takes priority over the sound quality.

- **[Software Version]**

You can check the software version of the four supplied speakers and optional subwoofer.

Note

- [RF Channel] is not available in some countries/regions.

[TV Center Speaker Mode]

If you connect the speaker system and TV with the HDMI cable (supplied) and the TV center speaker mode cable (supplied), you can output the center speaker portion of the speaker system sound from the TV. Set [Control for HDMI] to [On].

[On]: Uses a TV compatible with this feature as the center speaker. You can output the center speaker portion of the speaker system sound from the TV.

[Off]: Off

Note

- Depending on the audio content, sound may not be output from the TV.
- Depending on the Immersive Audio Enhancement or sound mode settings, sound may not be output from the TV.
- When  [Setup] - [Advanced Settings] - [Audio Settings] - [Sound Effect] is set to a setting other than [Sound Mode On], sound is not output from the TV.

Home Theatre System
HT-A9

[Audio Settings]

[DSEE Extreme]

This function is only available when [Auto Sound](*) or [Music] is selected as the sound mode.

[On]: Upscales your compressed music accurately using AI technology, and it makes you feel as if you are in a recording studio or at a concert.

[Off]: Off

* Only when [Music] is selected with [Auto Sound].

Note

- This function is compatible with the 2-channel digital input signals of 44.1 kHz or 48 kHz sampling frequency.
- The sampling frequency/bit depth after upscaling is up to 96 kHz/24 bit.
- This function does not work in the following conditions.
 - Chromecast built-in is used.
 - [Advanced Auto Volume] is set to [On].
 - Immersive Audio Enhancement function is set to [Immersive Audio Enhancement: On].

[Audio DRC]

You can compress the dynamic range of the audio signal to make it easier to hear quieter sounds.

[Auto]: Automatically compresses sound encoded in Dolby TrueHD.

[On]: Reproduces the Dolby and DTS sound track with the kind of dynamic range that the recording engineer intended.

[Off]: No compression of dynamic range.

[Sound Effect]

You can select sound effects such as the sound mode.

[Sound Mode On]: Vertical Surround Engine enhances the surround and height speaker channels to create an immersive and enveloping virtual surround effect such as sound mode and Immersive Audio Enhancement.

[Dolby Speaker Virtualizer]: Dolby Speaker Virtualizer enhances the surround and height speaker channels to create an immersive and enveloping virtual surround effect when you play Dolby format. Disables sound effects other than Dolby format.

[DTS Neural:X]: Performs up mixing in accordance with the surround environment. This function is disabled when the sampling frequency is 96 kHz - 192 kHz, or while Dolby format is playing.

[Advanced Auto Volume]

You can reduce the difference of volume due to the input signal. This function is effective when the volume of a TV commercial is louder than that of the TV program.

[On]: Adjusts the volume automatically.

[Off]: Off

Note

- Advanced Auto Volume function is not suitable for listening to music.

Related Topic

- [Setting the Sound Effect That Is Tailored to Sound Sources \(Sound Mode\)](#)
- [Enjoying Immersive Surround Experience \(IMMERSIVE AE\)](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

[HDMI Settings]

[Control for HDMI]

[On]: The Control for HDMI function is enabled. Devices connected with an HDMI cable can control each other.

[Off]: Off

[Standby Linked to TV]

This function is available when you set [Control for HDMI] to [On].

[Auto]: If the input of the speaker system is [TV] or [HDMI], the speaker system turns off automatically when you turn off the TV.

[On]: The speaker system turns off automatically when you turn off the TV regardless of the input.

[Off]: The speaker system does not turn off when you turn off the TV.

[Standby Through]

This function is available when you set [Control for HDMI] to [On].

[Auto]: Signals are output from the speaker system's HDMI OUT (TV ARC/eARC) jack when the TV is turned on while the speaker system is off. The speaker system standby power consumption can be reduced more than when set to [On] by turning off the connected TV.

[On]: Signals are always output from the speaker system's HDMI OUT (TV ARC/eARC) jack when the speaker system is not turned on. If you connect a TV other than those manufactured by Sony, we recommend that you select this setting.

[Off]: Signals are not output from the speaker system's HDMI OUT (TV ARC/eARC) jack when the speaker system is not turned on. Turn on the speaker system to enjoy the TV content of a device connected to the speaker system. The speaker system standby power consumption can be reduced more than when set to [On].

[eARC]

Set this function when the speaker system is connected to a TV's HDMI IN jack that is compatible with eARC. When connecting to a TV compatible with ARC (not compatible with eARC), the ARC function works regardless of this setting.

[On]: Enables the eARC function. The eARC function works when connecting a TV compatible with eARC.

[Off]: Disables the eARC function.

Note

- When [eARC] is set to [On], make sure of the eARC setting of the connected TV. For details, refer to the operating instructions of the TV.

Hint

- The speaker system is compatible with eARC (Enhanced Audio Return Channel). eARC is a new function standardized by HDMI2.1 and supports latest audio formats in addition to audio formats that are supported with existing ARC (Audio Return Channel).
You can enjoy object audio content, such as Dolby Atmos - Dolby TrueHD and DTS:X or multi-channel LPCM content that cannot be transmitted with ARC by connecting the speaker system and TV compatible with eARC using an HDMI cable.
For the connection, see "[Connecting a TV Compatible with ARC/eARC](#)."

[HDMI Signal Format]

You can select the video format that can be received. If the picture and sound of the device connected to the speaker system are not output correctly, change the [HDMI Signal Format] setting.

[Enhanced format (4K120, 8K)]: Select when both the connected TV and devices support high definition video formats such as 4K 120p, 8K, etc.

[Enhanced format]: Select when both the connected TV and devices support high definition video formats such as 4K 60p 4:4:4, etc.

[Standard format]: Select when the connected TV and devices support standard definition video formats.

Note

- Depending on the TV, the TV setting for HDMI output may be required. Refer to the operating instructions of the TV.
- If the picture and sound are not output while [HDMI Signal Format] is set to [Enhanced format (4K120, 8K)], set it to [Enhanced format] or [Standard format].
- If the picture and sound are not output while [HDMI Signal Format] is set to [Enhanced format], set it to [Standard format].
- For details on the video formats that can be received and the HDMI cable that can be used, see “[Supported HDMI Video Formats](#).”

[Video output for PIP/PBP-displayed TV]

[On]: When the TV input is selected on the speaker system, the picture from the HDMI input is output to the TV. To use the Picture-in-Picture (PIP)/Picture-by-Picture (PBP) display of the TV, select [On] for this setting.

[Off]: When the TV input is selected on the speaker system, the picture from the HDMI input is not output to the TV.

Home Theatre System
HT-A9

[Bluetooth Settings]

[Bluetooth Mode]

You can enjoy content from a BLUETOOTH device by using this speaker system or listen to sound from this speaker system by using BLUETOOTH compatible headphones.

[Receiver]: This speaker system is in receiver mode, which enables it to receive and output audio from the BLUETOOTH device.

[Transmitter]: This speaker system is in transmitter mode, which enables it to send audio to the BLUETOOTH compatible headphones. If you switch the input of the speaker system, [BT TX] appears on the front panel display.

[Off]: The BLUETOOTH function is turned off and you cannot select the [Bluetooth Audio] input.

[Device List]

When [Bluetooth Mode] is set to [Receiver]: A list of paired BLUETOOTH devices is displayed.

When [Bluetooth Mode] is set to [Transmitter]: A list of paired and detected BLUETOOTH headphones is displayed.

[Bluetooth Connection Quality]

You can set the BLUETOOTH connection quality for listening to audio of a mobile device using this speaker system.

This function is only available when you set [Bluetooth Mode] to [Receiver].

[Priority on Sound Quality]: Gives priority to sound quality. The codec is automatically selected as LDAC, AAC, or SBC depending on the compatible codec of the connected device.

[Priority on Stable Connection]: Gives priority to stable connection. The codec is set to SBC.

Note

- When connecting a BLUETOOTH device, the [Bluetooth Connection Quality] setting cannot be changed.

[Wireless Playback Quality]

You can set the transmission data rate of LDAC playback. This function is only available when you set [Bluetooth Mode] to [Transmitter].

[LDAC Sound Quality]: Enables LDAC codec and the highest bit rate is used. Sound is sent in a higher quality; however, audio playback sometimes may become unstable when the link quality is not good enough. If audio playback is unstable in this mode, select [LDAC Stable Connection (Auto)].

[LDAC Stable Connection (Auto)]: Enables LDAC codec and the data transfer rate is automatically changed depending on the environment.

[SBC Sound Quality]: Enables SBC codec. Sound is sent in a higher quality.

[SBC Stable Connection (Auto)]: Enables SBC codec and the data transfer rate is automatically changed depending on the environment.

Note

- When connecting a BLUETOOTH device, the [Wireless Playback Quality] setting cannot be changed.

Home Theatre System
HT-A9

[System Settings]

[Language]

You can select the language you want for the speaker system on-screen display.

[Network/Bluetooth Standby]

[On]: You can turn the speaker system on via the network or BLUETOOTH function.

[Off]: You can save power in standby mode. It may take time for sound to be output from the four supplied speakers or the optional subwoofer after turning the speaker system on in this mode.

Note

- If you agree to use the Chromecast built-in function, [Network/Bluetooth Standby] automatically switches to [On].
- If you set [RF Channel] to [On], [Network/Bluetooth Standby] automatically switches to [On].

[Auto Standby]

[On]: Turns on the [Auto Standby] function. When you do not operate the speaker system while no signal is input for about 20 minutes, the speaker system enters standby mode automatically.

[Off]: Off

[Device Name Setting]

You can change the name of this speaker system according to your preference when using the following functions.

- The BLUETOOTH function
- The home network
- Spotify
- Chromecast built-in

Follow the on-screen instructions and use the software keyboard to enter the name.

[System Information]

You can display the speaker system information such as the software version.

[Software License Information]

You can display the Software License Information.

Home Theatre System
HT-A9

[Network Settings]

[Wi-Fi Connection]

[On]: Enables Wi-Fi connection of the speaker system.

[Off]: Disables Wi-Fi connection of the speaker system.

[Internet Settings]

You can set the network settings and check the network connections.

[Network Connection Status]

You can display the current network connection status.

[Software Update Notification]

[On]: Sets the speaker system to inform you of the latest software version information.

[Off]: Off

[Auto Update Settings]

- **[Auto Update]**

[On]: Software is updated automatically between 2 a.m. and 5 a.m. local time in the selected [Time Zone] while the speaker system is not in use. If you select [Off] for [Network/Bluetooth Standby], software updates are installed right after you turn off the speaker system.

[Off]: Off

- **[Time Zone]**

Select your area/city.

Note

- Software update may be performed even if you select [Off] in [Auto Update] depending on the details of the updates.
- Software update is performed automatically within 11 days of a new software release.
- If you agree to use the Chromecast built-in function, [Auto Update] automatically switches to [On].

[Privacy Setting]

The speaker system collects the information of your device usage. Read the privacy policy, which will appear when this setting is required, and decide whether you agree to information gathering.

[Agree]: Select this when you accept information gathering.

[Do not agree]: Select this when you do not accept information gathering.

Hint

- Even if you have selected [Agree], you will be able to stop information gathering by reselecting [Do not agree] or resetting [Network Settings] to the factory default via [Resetting].

[Chromecast built-in]

You can set sharing of usage data and confirm the Chromecast built-in feature.

- **[Share usage data]**

[On]: Provides information related to the use of the cast feature to Google.

[Off]: Off

- **[About Chromecast built-in]**

Displays the reference URLs for the Chromecast built-in feature.

5-025-234-11(3) Copyright 2021 Sony Corporation

Home Theatre System
HT-A9

[Resetting]

You can reset the speaker system settings to the factory default by selecting the group of settings. All the settings within the group will be reset.

Related Topic

- [Resetting the Speaker System](#)

Home Theatre System
HT-A9

[Software Update]

You can update the software of the control box, four supplied speakers or optional subwoofer.

Related Topic

- [Updating the Software](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

Updating the Software

By updating your software to the latest version, you can take advantage of the newest functions.
For information about update functions, visit the following website:

- For customers in Americas
<https://www.sony.com/am/support>
- For customers in Europe
<https://www.sony.eu/support>
- For customers in Asia-Pacific, Oceania, Middle East, and Africa
<https://www.sony-asia.com/support>

Note

- It may take up to 20 minutes for the update to be completed.
- An Internet environment is necessary to perform updates via the Internet.
- While the updating operation is in progress, do not turn on or off the speaker system, disconnect the AC power cord (mains lead), disconnect/connect an HDMI cable, or operate the speaker system or TV. Wait for the software update to complete.
- Set  [Setup] - [Advanced Settings] - [Network Settings] - [Auto Update Settings] - [Auto Update] to [On] when you want to perform software updates automatically. Software update may be performed even if you select [Off] in [Auto Update] depending on the details of the updates.

1 Turn the speaker system on.

When using the optional subwoofer, turn on the subwoofer as well.

2 Press HOME.

The home menu appears on the TV screen.

3 Select [Setup] - [Advanced Settings] on the home menu.

If the speaker system detects update information for the speaker system on the network, the update notification and [Software Update] appear on the home menu. In this case, select [Software Update] and follow the on-screen instructions.

4 Select [Software Update].

The [Software Update] screen appears on the TV screen.

5 Select the item for updating.

Select the updating item from the following items by pressing  (up)/  (down) and  (enter), then update the software by following the on-screen instructions.

When a software update starts, the speaker system automatically reboots.

During a software update, [UPDATE] appears in the front panel display.

After the update is complete, the speaker system automatically reboots.

[Network Update]

Updates the software using the available network. Make sure that the network is connected to the Internet.

[USB Update]

Updates the software using a USB memory. For details on updating, refer to the instructions that are displayed when downloading the update file.

[Wireless Speakers Update]

Updates the software of the speakers or optional subwoofer when the software of the speaker system is the latest version.

Note

- If updating of the speakers or optional subwoofer does not work, move them to a location near the control box and update.

5-025-234-11(3) Copyright 2021 Sony Corporation

Troubleshooting

If the speaker system does not work properly, handle it in the following order.

1. Search for the cause and solution of the issue by referring to these Help Guide or Operating Instructions.

The troubleshooting method is listed in "Troubleshooting."

**2. Search for the cause and solution of the issue on the Sony support site.**

Sony support site provides latest support information and Frequently Asked Questions.

- For customers in Americas
<https://www.sony.com/am/support>
- For customers in Europe
<https://www.sony.eu/support>
- For customers in Asia-Pacific, Oceania, Middle East, and Africa
<https://www.sony-asia.com/support>

**3. Reset the speaker system.**

All the settings of the speaker system return to their initial status.

**4. Should any problems persist, consult your nearest Sony dealer.**

Be sure to bring your control box and speakers, even if it seems as though only one has a problem, when you request to repair.

Home Theatre System

HT-A9

The speaker system does not power up.

- Check that the AC power cord (mains lead) is connected securely.
- Disconnect the AC power cord (mains lead) from the wall outlet (mains), and then reconnect after several minutes.

The speaker system does not turn on even when the TV is turned on.

- Set  [Setup] - [Advanced Settings] - [HDMI Settings] - [Control for HDMI] to [On]. The TV must support the Control for HDMI function. For details, refer to the operating instructions of your TV.
- Check the speaker settings of the TV. The speaker system power syncs with the speaker settings of the TV. For details, refer to the operating instructions of your TV.
- Depending on the TV, if the sound was output from the speakers of the TV the previous time, the speaker system may not turn on by interlocking with the TV power even when the TV is turned on.

Home Theatre System
HT-A9

The speaker system turns off when the TV is turned off.

- Check the setting of  [Setup] - [Advanced Settings] - [HDMI Settings] - [Standby Linked to TV]. When [Standby Linked to TV] is set to [On] or [Auto], the speaker system turns off automatically when you turn off the TV.

The speaker system does not turn off even when the TV is turned off.

-
- Check the setting of  [Setup] - [Advanced Settings] - [HDMI Settings] - [Standby Linked to TV]. To turn the speaker system off automatically, regardless of the input when you turn off the TV, set [Standby Linked to TV] to [On]. The TV must support the Control for HDMI function. For details, refer to the operating instructions of your TV.

Home Theatre System
HT-A9

The speaker system cannot be turned off.

- The speaker system may be in demo mode. To cancel demo mode, reset the speaker system. Press and hold  (power) on the control box for more than 10 seconds.

There is no picture or the picture is not output correctly.

- Select the appropriate input.
- When there is no picture while the TV input is selected, select the TV channel that you want using the TV remote control.
- When there is no picture while the HDMI input is selected, press the playback button of the connected device.
- Disconnect an HDMI cable, then connect it again. Make sure that the cable is firmly inserted.
- When there is no picture from the connected device or the picture from the connected device is not output correctly, change the setting of  [Setup] - [Advanced Settings] - [HDMI Settings] - [HDMI Signal Format] - [HDMI IN].
- The speaker system is connected to an input device that is not HDCP (High-bandwidth Digital Content Protection) compliant. In this case, check the specifications of the connected device.

The picture on the TV screen is distorted.

- Interference of the wireless function between the TV/other wireless devices and the control box may have occurred. Move the control box, change the direction of the control box, or install the control box far away from the TV/other wireless devices.
- There is an interference of the frequency band between the wireless LAN and the wireless connection of the speakers. Switch the band of the wireless LAN connection of the TV or device that is playing an image to 2.4 GHz.

Home Theatre System
HT-A9

3D content from the HDMI IN jack does not appear on the TV screen.

- Depending on the TV or video device, 3D content may not appear. Check the supported HDMI video format.

Related Topic

- [Supported HDMI Video Formats](#)

5-025-234-11(3) Copyright 2021 Sony Corporation

High definition video signal (4K/60p 4:4:4, 4:2:2 and 4K/60p 4:2:0 10 bit, etc.) from the HDMI IN jack does not appear on the TV screen.

- Depending on the TV or the video device, high definition video signals such as 4K may not appear. Check the video capability and settings of your TV and video device.
- Change the setting of  [Setup] - [Advanced Settings] - [HDMI Settings] - [HDMI Signal Format] - [HDMI IN] according to the video signal that is supported by a connected TV or device.
- When you play high definition video signals such as 4K video content that is protected by copyright, connect the speaker system to the HDMI input jack that supports HDCP2.2 or HDCP2.3 on the TV. For details, refer to the operating instructions of your TV.

Related Topic

- [Supported HDMI Video Formats](#)

Home Theatre System
HT-A9

An image is not displayed on the entire TV screen.

- The aspect ratio on the media is fixed.

5-025-234-11(3) Copyright 2021 Sony Corporation

Picture and sound of the device that is connected to the speaker system are not output from the TV when the speaker system is not turned on.

-
- Set  [Setup] - [Advanced Settings] - [HDMI Settings] - [Control for HDMI] to [On] on the speaker system, and then set [Standby Through] to [Auto] or [On].
 - Turn on the speaker system, and then switch the input for the device playing.
 - If connected to devices other than those manufactured by Sony that support the Control for HDMI function, set  [Setup] - [Advanced Settings] - [HDMI Settings] - [Standby Through] to [On].

HDR contents cannot be shown in high-dynamic range.

- Check the settings of the TV and connected device. For details, refer to the operating instructions of your TV and the connected device.
- Depending on the [HDMI Signal Format] setting, an AV device may not be able to output HDR contents in HDR format. Change the setting of  [Setup] - [Advanced Settings] - [HDMI Settings] - [HDMI Signal Format] - [HDMI IN] according to the video format that is supported by the AV device.

Related Topic

- [Supported HDMI Video Formats](#)

No sound is output from the speaker system.

- Check that the AC power cords (mains leads) of the control box and speakers are connected securely.
- If the power indicator of the speaker is turned off, try the following.
 - Check that the AC power cord (mains lead) of the speaker is connected securely.
 - Press  (power) on the bottom of the speaker to turn on the speaker.
- If the power indicator on the speaker flashes slowly in green or lights in red, try the following.
 - Move the speaker to a location near the control box so that the power indicator on the speaker lights in green.
 - Connect the speaker and control box manually.
 - Check the status of the wireless connection in  [Setup] - [Advanced Settings] - [Speaker Settings] - [Wireless Speaker Settings] - [Check wireless connection].
- It may take about 1 minute until the sound is output if  [Setup] - [Advanced Settings] - [Speaker Settings] - [Wireless Speaker Settings] - [RF Channel] is switched from [Off] to [On].
- Press  (volume) + on the remote control to increase the volume or cancel muting.
- The speakers may be connected to another compatible device. Try manual connection.

Related Topic

- [If the Speakers Are not Connected Correctly](#)

Home Theatre System
HT-A9

The speaker system cannot connect to a TV with the BLUETOOTH function.

- When you connect the speaker system and TV with an HDMI cable, the BLUETOOTH connection is canceled.

No TV sound is output from the speaker system.


- Check the type and connection of an HDMI cable or TV center speaker mode cable that is connected to the speaker system and the TV.
- Disconnect the cables that are connected to the TV and the speaker system, then connect them firmly again. Disconnect the AC power cords (mains leads) of the TV and the speaker system from the AC outlets (mains), then connect them again.
- When the speaker system and TV are connected with an HDMI cable, check the following.
 - The HDMI jack of the connected TV is labeled with “eARC” or “ARC.”
 - The Control for HDMI function of the TV is set to on.
 - The eARC or ARC function of the TV is enabled.
 - On the speaker system,  [Setup] - [Advanced Settings] - [HDMI Settings] - [Control for HDMI] is set to [On].
- If your TV is not compatible with eARC, set  [Setup] - [Advanced Settings] - [HDMI Settings] - [eARC] to [Off].
- Switch the input of the speaker system to the TV input.
- Increase the volume on the speaker system or cancel muting.
- If sound of a Blu-ray Disc player, set-top box, gaming console, etc. connected to the TV is not output, connect the device to the HDMI IN jack of the speaker system and switch input of the speaker system to the input for the connected device ([HDMI]).
- Depending on the order in which you turn on the TV and the speaker system, the speaker system may be muted and [MUTING] is displayed on the front panel display of the speaker system. If this happens, turn on the TV first, then the speaker system.
- Press TV/AUDIO SYSTEM on the remote control to switch the output for the connected TV sound or set the speakers setting of your TV to Audio System. Refer to the operating instructions of your TV regarding how to set the TV.

Related Topic

- [Connecting a TV Compatible with ARC/eARC](#)
- [Connecting an AV Device Compatible with the 2K/4K Video Format](#)
- [Connecting an AV Device Compatible with the 8K Video Format](#)

The sound skips or noise is generated.

- Install the control box and speakers at a distance of 1.5 m (5 ft) or more from a wireless LAN router, etc. It may be improved by changing the direction or the antenna's angle of the wireless LAN router.

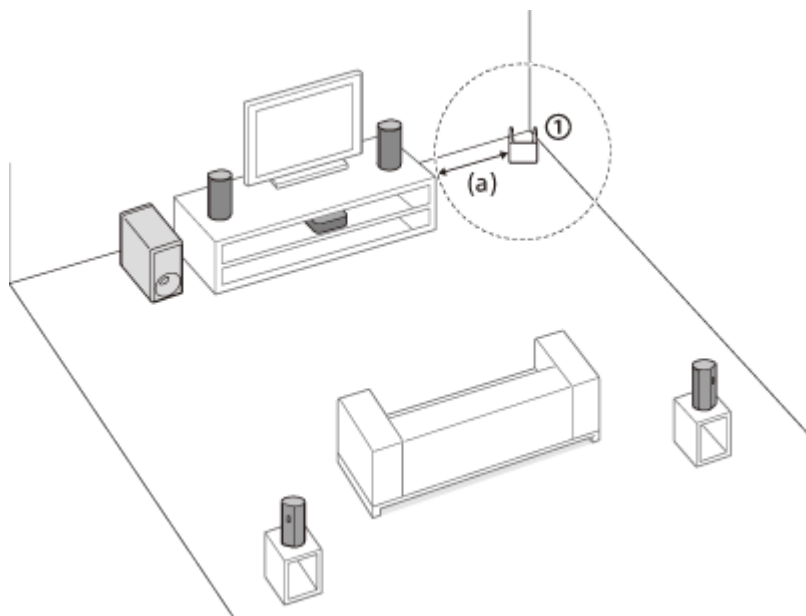

① Wireless LAN router, etc.

(a) 1.5 m (5 ft) or more

- Set  [Setup] - [Advanced Settings] - [Speaker Settings] - [Wireless Speaker Settings] - [Wireless Playback Quality] to [Connection].
- Set  [Setup] - [Advanced Settings] - [Speaker Settings] - [Wireless Speaker Settings] - [RF Channel] to [Off], then set to [On].
- If a device that generates electromagnetic radiation, such as a wireless LAN device or a microwave oven is nearby, move the speaker system away from the device.
- Interference may occur by a wireless LAN connection of a peripheral device. Change the network connection of the peripheral device to the wired LAN.
- The control box and speakers are installed too far away from each other. Bring them closer together.
- If there is any obstacle between the control box and speakers, remove it or move the control box and speakers away from the obstacle.
- Do not install the control box in the inner position of a shelf. Install the control box in or on a shelf so that the front panel display is not hidden.
- Move the control box, change the direction of the control box, or install the control box far away from a TV.
- Interference of wireless bandwidth between the network connection and speaker connection may occur. Change the wireless LAN connection of the speaker system to the wired LAN connection, or switch the band of the wireless LAN connection to 2.4 GHz.

Picture and sound of the device that is connected to the speaker system are not output from the TV when the speaker system is not turned on.

- Set  [Setup] - [Advanced Settings] - [HDMI Settings] - [Control for HDMI] to [On] on the speaker system, and then set [Standby Through] to [Auto] or [On].
- Turn on the speaker system, and then switch the input for the device playing.
- If connected to devices other than those manufactured by Sony that support the Control for HDMI function, set  [Setup] - [Advanced Settings] - [HDMI Settings] - [Standby Through] to [On].

The sound is output from both the speaker system and TV.

- Mute the sound of the speaker system or TV.
- When you connect the speaker system and TV with the TV center speaker mode cable and set  [Setup] - [Advanced Settings] - [Speaker Settings] - [TV Center Speaker Mode] to [On], the center part of the speaker system sound is output from the TV.

The sound is interrupted while watching a TV program or content on a Blu-ray Disc, etc.

- Check the sound mode setting. If the sound mode is set to [Auto Sound], the sound may be interrupted when the sound mode is changed automatically according to the information of the program that is being played. If you do not want to change the sound mode automatically, set the sound mode to a setting other than [Auto Sound].

Related Topic

- [Setting the Sound Effect That Is Tailored to Sound Sources \(Sound Mode\)](#)

The TV sound from this speaker system lags behind the image.

- Set the adjustment value of the delay between the picture and sound to 0 msec if it is set to the range between 25 msec and 300 msec.
- A time gap between the sound and picture may occur depending on the sound source. If your TV has a function that delays the image, use it for adjustment. For details, refer to the operating instructions of your TV.

Related Topic

- [When Watching the TV](#)
- [When Watching Another Device](#)

No sound or only a very low-level sound of the device connected to the speaker system is heard.

-
- Press  (volume) + on the remote control and check the volume level.
 - Press  (muting) or  (volume) + on the remote control to cancel the muting function.
 - Make sure the input source is selected correctly. You should try other input sources by pressing the input select button on the remote control (TV/HDMI/BLEETOOTH).
 - Make sure that the connectors are firmly inserted.
 - When you play content compatible with copyright protection technology (HDCP), sound may not be output from the speaker system.
 - Change the setting of  [Setup] - [Advanced Settings] - [HDMI Settings] - [HDMI Signal Format] - [HDMI IN].

The surround effect cannot be obtained.

- Depending on the input signal and the sound mode setting, surround sound processing may not work effectively. The surround effect may be subtle, depending on the program or disc.
- To play multi-channel audio, check the digital audio output setting on the device connected to the speaker system. For details, refer to the operating instructions of the connected device.

Home Theatre System
HT-A9

No sound is output from the optional subwoofer.



- It may be improved by setting  [Setup] - [Advanced Settings] - [Speaker Settings] - [Wireless Speaker Settings] - [Wireless Playback Quality] to [Connection].
- Refer to the operating instructions of the optional subwoofer.


Sound is not output from some speakers.

- Some speakers may not output sound depending on the contents or sound mode.

Sound Field Optimization is failed.

- Speakers may not be correctly located. Check the installation location on the labels on the bottom of the four speakers and install them in the correct location.
- Install the speakers upright so that the labels on the bottom of the speakers are directed downwards.
 - If the speaker is installed sideways, Sound Field Optimization cannot be performed properly.
 - If the speaker is installed in an inclined state, the microphone for measurement of the speaker is also inclined and the sound for measurement ceiling distance is output in an inclined state. These may be the cause that the Sound Field Optimization failed.
- Perform Sound Field Optimization again in a situation where the surrounding is quiet.
- Install the speakers with a distance of more than 50 cm (19 3/4 in). If the distance between speakers is too close, Sound Field Optimization cannot be performed properly.
- Bring the speakers closer if the speakers are installed at a distance far away from each other.
- If there is any obstacle between speakers or the microphone for measurement of the speaker is blocked by an obstacle, Sound Field Optimization cannot be performed properly. Remove it if there is any obstacle between speakers or in front of speakers.

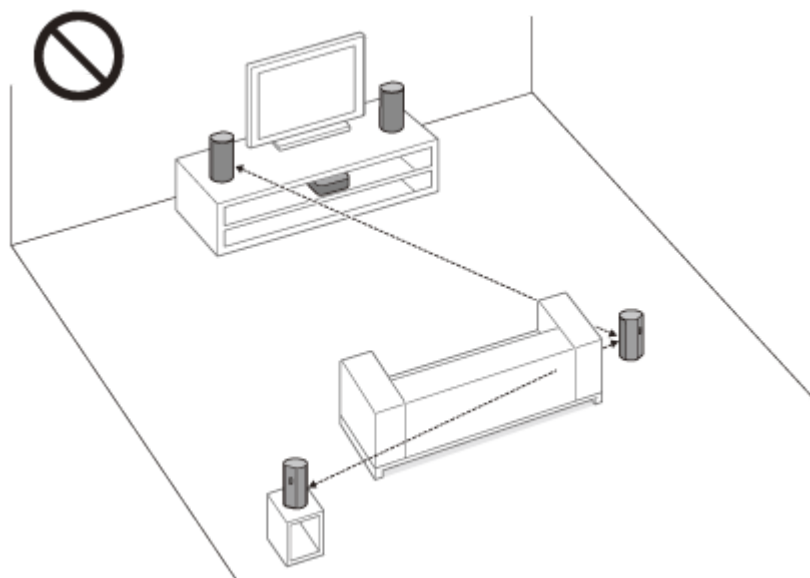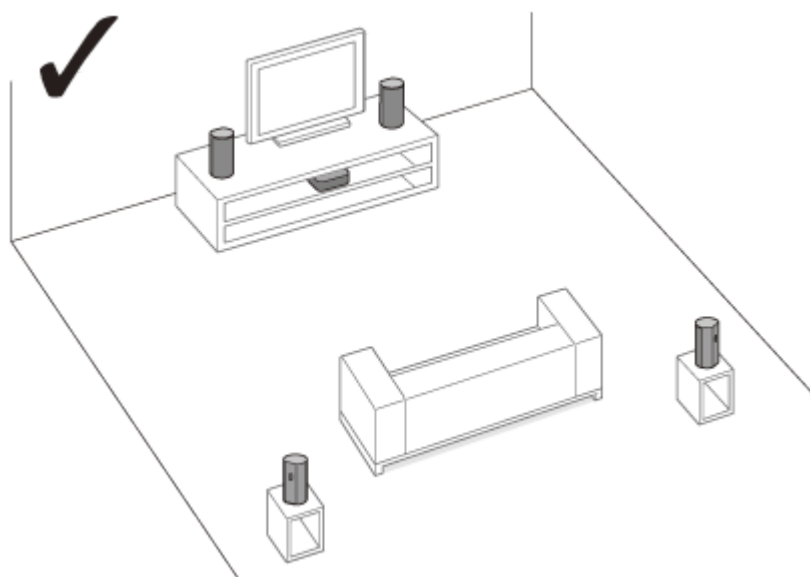

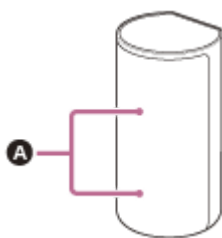

A Microphones for measurement

5-025-234-11(3) Copyright 2021 Sony Corporation

Pairing cannot be achieved.

- Bring this speaker system and the BLUETOOTH device closer together.
- Make sure this speaker system is not receiving interference from a wireless LAN device, other 2.4 GHz wireless devices, or a microwave oven. If a device that generates electromagnetic radiation is nearby, move the device away from this speaker system.

BLUETOOTH connection cannot be completed.

- Make sure that [BT] appears in the front panel display.
 - Make sure the BLUETOOTH device to be connected with is turned on and the BLUETOOTH function is enabled.
 - Bring this speaker system and the BLUETOOTH device closer together.
 - Pair this speaker system and the BLUETOOTH device again. You may need to cancel the pairing with this speaker system using your BLUETOOTH device first.
 - Pairing information may be deleted. Perform the pairing operation again.
-

Related Topic

- [Listening to Music by Pairing the Mobile Device That Is Connected for the First Time](#)

Sound of the connected BLUETOOTH mobile device is not output from the speaker system.

-
- Make sure that [BT] appears in the front panel display.
 - Bring this speaker system and the BLUETOOTH device closer together.
 - If a device that generates electromagnetic radiation, such as a wireless LAN device, other BLUETOOTH devices, or a microwave oven is nearby, move the device away from this speaker system.
 - Remove any obstacle between this speaker system and the BLUETOOTH device or move this speaker system away from the obstacle.
 - Reposition the connected BLUETOOTH device.
 - Switch the wireless LAN frequency of any nearby wireless LAN router or PC to the 5 GHz range.
 - Increase the volume on the connected BLUETOOTH device.
-

Related Topic

- [Listening to Music by Pairing the Mobile Device That Is Connected for the First Time](#)

Pairing cannot be achieved.

- Bring this speaker system and the BLUETOOTH headphones closer together.
- Make sure this speaker system is not receiving interference from a wireless LAN device, other 2.4 GHz wireless devices, or a microwave oven. If a device that generates electromagnetic radiation is nearby, move the device away from this speaker system.

BLUETOOTH connection cannot be completed.

- Make sure that [BT TX] appears in the front panel display.
 - Make sure the BLUETOOTH headphones to be connected with is turned on and the BLUETOOTH function is enabled.
 - Bring this speaker system and the BLUETOOTH headphones closer together.
 - Pair this speaker system and the BLUETOOTH headphones again. You may need to cancel the pairing for the BLUETOOTH headphones with this speaker system first.
 - Pairing information may be deleted. Perform the pairing operation again.
-

Related Topic

- [Listening to Music by Pairing the Mobile Device That Is Connected for the First Time](#)
- [Listening to Sound by Pairing with Headphones](#)

No sound is output from the connected BLUETOOTH headphones.

- Make sure that [BT TX] appears in the front panel display.
- Bring this speaker system and the BLUETOOTH headphones closer together.
- If a device that generates electromagnetic radiation, such as a wireless LAN device, other BLUETOOTH devices, or a microwave oven is nearby, move the device away from this speaker system.
- Remove any obstacle between this speaker system and the BLUETOOTH headphones, or move this speaker system away from the obstacle.
- Reposition the connected BLUETOOTH headphones.
- Switch the wireless LAN frequency of any nearby wireless LAN router or PC to the 5 GHz range.
- Increase the volume on the connected BLUETOOTH headphones.
- Set  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Wireless Playback Quality] to [LDAC Stable Connection (Auto)] or [SBC Stable Connection (Auto)].
- Some content may not be output due to content protection.

Related Topic

- [Listening to Music by Pairing the Mobile Device That Is Connected for the First Time](#)

The BLUETOOTH connection with the headphones becomes disconnected.

- When using Chromecast built-in, the headphones cannot connect to the speaker system via the BLUETOOTH function.

The speaker system cannot connect to the network or the network connection is unstable.

-
- Make sure that the wireless LAN router is turned on.
 - Check the network connection and network settings.
 - Depending on the usage environment (including the wall material), radio wave reception conditions, or obstacles between the speaker system and wireless LAN router, the possible communication distance may be shortened. Move the speaker system and wireless LAN router closer to each other.
 - Devices that use a 2.4 GHz frequency band, such as a microwave, BLUETOOTH, or digital cordless device, may interrupt communication. Move the speaker system away from such devices, or turn off such devices.
 - The wireless LAN connection may become unstable depending on the usage environment, especially while using the BLUETOOTH function of the speaker system. In this case, adjust the usage environment.

The wireless LAN router you want is not shown in the wireless network list.

-
- Press **OPTIONS** on the remote control to update the list. If the wireless LAN router you want is still not detected, select **[New connection registration]** from the network list, then input a network name (SSID) manually.

Home Theatre System
HT-A9

You cannot connect the speaker system to the Internet.

- Check the wireless LAN connection.
- Restart the wireless LAN router.

5-025-234-11(3) Copyright 2021 Sony Corporation

Home Theatre System
HT-A9

The remote control of this speaker system does not function.

- Point the remote control at the remote control sensor on the control box.
 - Remove any obstacles in the path between the remote control and the speaker system.
 - Replace both batteries in the remote control with new ones if they are weak.
 - Make sure you are pressing the correct button on the remote control.
-

Related Topic

- [Control Box](#)

The Control for HDMI function does not work properly.

- Check the connection with the speaker system.
- Enable the Control for HDMI function on the TV. For details, refer to the operating instructions of your TV.
- Wait a while, and then try again. If you unplug the speaker system, it will take a while before operations can be made. Wait for 15 seconds or longer, and then try again.
- Make sure the devices connected to the speaker system support the Control for HDMI function.
- Enable the Control for HDMI function on the devices connected to the speaker system. For details, refer to the operating instructions of your device.
- The type and number of devices that can be controlled by the Control for HDMI function are restricted by the HDMI CEC standard as follows:
 - Recording devices (Blu-ray Disc recorder, DVD recorder, etc.): up to 3 devices
 - Playback devices (Blu-ray Disc player, DVD player, etc.): up to 3 devices (this speaker system uses one of them)
 - Tuner-related devices: up to 4 devices
 - Audio system (receiver/headphones): up to 1 device (used by this speaker system)

Related Topic

- [Connecting a TV Compatible with ARC/eARC](#)
- [Connecting an AV Device Compatible with the 2K/4K Video Format](#)
- [Connecting an AV Device Compatible with the 8K Video Format](#)

[PRTCT], [PUSH], speaker name ([FL], [FR], [RL], [RR], or [SUB]), and [POWER] flash alternately in the front panel display.

- Press  (power) on the corresponding speaker ([FL]: left front speaker, [FR]: right front speaker, [RL]: left rear speaker, [RR]: right rear speaker, [SUB]: optional subwoofer) to turn each off. For the speaker, disconnect the AC power cord (mains lead), then restart the speaker system. For the optional subwoofer, disconnect the AC power cord (mains lead) and make sure nothing is obstructing the ventilation holes of the optional subwoofer, then restart the speaker system. If they are reconnected properly, the display in the front panel display returns to the normal display.

Home Theatre System
HT-A9

[HIGH], [TEMP], and [ERROR] appear alternately for 2 seconds each in the front panel display, [STANDBY] appears in the front panel display, then the speaker system is turned off.

-
- High-temperature is detected in the speaker system. Press  (power) to restart the speaker system.

Home Theatre System
HT-A9

[BT TX] appears in the front panel display.

-
- Set  [Setup] - [Advanced Settings] - [Bluetooth Settings] - [Bluetooth Mode] to [Receiver]. [BT TX] appears in the front panel display if [Bluetooth Mode] is set to [Transmitter].

Home Theatre System
HT-A9

Wireless functions (wireless LAN, the BLUETOOTH function, speakers, or optional subwoofer) are unstable.

- Do not place metal objects other than a TV around the speaker system.

Home Theatre System
HT-A9

Spotify cannot be played with the MUSIC SERVICE button, or cannot be played on the way of playback.

-
- Play music on Spotify on the speaker system by using the Spotify Connect function on the Spotify app of the mobile device.

5-025-234-11(3) Copyright 2021 Sony Corporation

Home Theatre System
HT-A9

The speaker system restarts.

- When connecting to a TV with a resolution that is different from that of the speaker system, the speaker system may restart to reset the picture output setting.

Resetting the Speaker System

If the speaker system still does not operate properly, reset the speaker system as follows.

- 1 **Press HOME.**
The home menu appears on the TV screen.
- 2 **Select  [Setup] - [Advanced Settings] on the home menu.**
- 3 **Select [Resetting].**
- 4 **Select the menu item you want to reset.**
- 5 **Select [Start].**

To cancel resetting

Select [Cancel] in step 5.

If you cannot perform resetting using the home menu

Press and hold  (power) on the control box for more than 10 seconds.

The settings return to their initial status.

Note

- By resetting, the link with the speakers and optional subwoofer may be lost. In this case, reconnect the speakers and optional subwoofer by referring to its operating instructions.

Resetting the speakers

Press and hold  (power) on the bottom of the speaker for more than 10 seconds.

The power indicator of the speaker flashes slowly in red and resetting starts.

The power indicator of the speaker flashes in green and orange alternately when resetting is completed.

When resetting is completed, disconnect the AC power cord (mains lead), then connect the AC power cord (mains lead) after the power indicator turns off.

Supported Input Audio Formats

Supported audio formats differ depending on the input setting of the speaker system. “○” indicates the supported audio format and “—” indicates the unsupported audio format in the table below.

Format	HDMI input	TV input (eARC)	TV input (ARC)
LPCM 2ch	○	○	○
LPCM 5.1ch	○	○	—
LPCM 7.1ch	○	○	—
Dolby Digital	○	○	○
Dolby TrueHD	○	○	—
Dolby Digital Plus	○	○	○
Dolby Atmos	○	○	—
Dolby Atmos - Dolby TrueHD	○	○	—
Dolby Atmos - Dolby Digital Plus	○	○	○
DTS	○	○	○
DTS-ES Discrete 6.1, DTS-ES Matrix 6.1	○	○	○
DTS 96/24	○	○	○
DTS-HD High Resolution Audio	○	○	—
DTS-HD Master Audio	○	○	—
DTS:X	○	○	—

Note

- The HDMI IN jack does not support audio formats that contain copy protections, such as Super Audio CD or DVD-Audio.

Home Theatre System
HT-A9

Supported HDMI Video Formats

Video formats supported by this speaker system are as follows.

8K 24/25/30/50/60 Hz

4K 24/25/30/50/60/100/120 Hz

1080p 24/25/30/50/60/100/120 Hz

1080i 50/60 Hz

720p 24/30/50/60 Hz

576p 50 Hz

480p 60 Hz

About the [HDMI Signal Format] setting

When  [Setup] - [Advanced Settings] - [HDMI Settings] - [HDMI Signal Format] is set to [Enhanced format (4K120, 8K)], all video formats supported by this speaker system can be input.

When [HDMI Signal Format] is set to [Enhanced format], the video format is limited to 4K 60Hz 4:4:4, 4:2:2, etc.

When [HDMI Signal Format] is set to [Standard format], the video format is limited to 4K 60Hz 4:2:0, 4K 24Hz, etc.

About the HDMI cable to use

Use the supplied HDMI cable to connect to a TV.

When using an Ultra High Speed HDMI Cable that supports 48 Gbps, it supports all video formats supported by this speaker system.

When using a Premium High Speed HDMI Cable with Ethernet that supports 18 Gbps, it supports video formats up to 4K 60Hz 4:4:4, 4:2:2, etc.

About the 3D signal

The following video format is compatible with 3D signal in Side-by-Side (Half) format.

- 1080i 50/60 Hz

The following video formats are compatible with 3D signal in Frame packing and Over-Under (Top-and Bottom) format.

- 1080p 24 Hz
- 720p 50/60 Hz

About the OPTIONS button and the On-Screen Display (OSD) of the speaker system

In the case of the following signals, the OPTIONS button does not work and the On-Screen Display (OSD) of the speaker system is not displayed.

- The signal with resolution of 4096 × 2160p
- The 3D signal in Side-by-Side (Half) format or Over-Under (Top-and-Bottom) format

Notes on HDMI jack and HDMI connections

- Use an HDMI-authorized cable.
- We do not recommend using an HDMI-DVI conversion cable.
- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be suppressed by the connected device.
- Sound may be interrupted when the sampling frequency or the number of channels of audio output signals from the playback device is switched.

- When  [Setup] - [Advanced Settings] - [HDMI Settings] - [Video output for PIP/PBP-displayed TV] is set to [On] and TV input is selected, video signals via the HDMI IN jack are output from the HDMI OUT (TV ARC/eARC) jack.
- This speaker system supports “TRILUMINOS.”
- All HDMI IN and HDMI OUT (TV ARC/eARC) jacks support transmission of 4K 120p or 8K, HDCP2.2 and HDCP2.3(*1), BT.2020 wide color spaces(*2), and HDR (High Dynamic Range)(*3) contents pass-through.
- When connecting to a TV which resolution is different from that of the speaker system, the speaker system may restart to reset the picture output setting.

*1 HDCP2.2 and HDCP2.3 are newly enhanced copyright protection technology that is used to protect content such as 4K movies. If the device is compatible with HDCP2.2 or HDCP2.3, you can watch contents even if the HDCP version is different, such as an HDCP2.2 compatible TV and an HDCP2.3 compatible 4K device.

*2 BT.2020 color space is a new wider color standard that is defined for ultra-high definition television systems, etc.

*3 HDR is an emerging video format that can display a wider range of brightness levels. The speaker system is compatible with HDR10, HLG (Hybrid Log-Gamma), and Dolby Vision.

On BLUETOOTH Communication

- BLUETOOTH devices should be used within approximately 10 meters (33 feet) (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions.
 - When a person, metal object, wall or other obstruction is between the devices with a BLUETOOTH connection
 - Locations where a wireless LAN is installed
 - Around microwave ovens that are in use
 - Locations where other electromagnetic waves occur
- BLUETOOTH devices and wireless LAN (IEEE 802.11 b/g/n) use the same frequency band (2.4 GHz). When using your BLUETOOTH device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, try the following remedies:
 - Use this speaker system at least 10 meters (33 feet) away from the wireless LAN device.
 - Turn off the power to the wireless LAN device when using your BLUETOOTH device within 10 meters (33 feet).
 - Install this speaker system and BLUETOOTH device as closer to each other as possible.
- The radio waves broadcast by this speaker system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this speaker system and BLUETOOTH device in the following locations:
 - In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gasses may be present
 - Near automatic doors or fire alarms
- This speaker system supports security functions that comply with the BLUETOOTH specification to ensure secure connection during communication using BLUETOOTH technology. However, this security may be insufficient depending on the setting content and other factors, so always be careful when performing communication using BLUETOOTH technology.
- Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using BLUETOOTH technology.
- BLUETOOTH communication is not necessarily guaranteed with all BLUETOOTH devices that have the same profile as this speaker system.
- BLUETOOTH devices connected with this speaker system must comply with the BLUETOOTH specification prescribed by the Bluetooth SIG, Inc., and must be certified to comply. However, even when a device complies with the BLUETOOTH specification, there may be cases where the characteristics or specifications of the BLUETOOTH device make it impossible to connect, or may result in different control methods, display or operation.
- Noise may occur or the audio may cut off depending on the BLUETOOTH device connected with this speaker system, the communications environment, or surrounding conditions.

If you have any questions or problems concerning your speaker system, please consult your nearest Sony dealer.

Copyrights and Trademarks

This speaker system incorporates Dolby(*) Digital and the DTS(**) Digital Surround System.

* Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright © 2012–2020 Dolby Laboratories. All rights reserved.

** For DTS patents, see <http://patents.dts.com>.

Manufactured under license from DTS, Inc. DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Google, Google Play, Google Home and Chromecast built-in are trademarks of Google LLC. Google Assistant is not available in certain languages and countries.

Apple, AirPlay, iPad, iPhone, iPod touch and Siri are trademarks of Apple Inc., registered in the U.S. and other countries.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

“BRAVIA” logo is a trademark of Sony Corporation.

WALKMAN® and WALKMAN® logo are registered trademarks of Sony Corporation.

“PlayStation” is a registered trademark or trademark of Sony Interactive Entertainment Inc.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Wi-Fi®, Wi-Fi Protected Access® and Wi-Fi Alliance® are registered trademarks of Wi-Fi Alliance.

Wi-Fi CERTIFIED™, WPA™, and WPA2™ are trademarks of Wi-Fi Alliance.

LDAC™ and LDAC logo are trademarks of Sony Corporation.

LDAC is an audio coding technology developed by Sony that enables the transmission of High-Resolution (Hi-Res) Audio content, even over a Bluetooth connection. Unlike other Bluetooth compatible coding technologies such as SBC, it operates without any down-conversion of the Hi-Res Audio content(*), and allows approximately three times more data(**) than those other technologies to be transmitted over a Bluetooth wireless network with unprecedented sound quality, by means of efficient coding and optimized packetization.

* excluding DSD format contents

** in comparison with SBC (Subband Coding) when the bitrate of 990 kbps (96/48 kHz) or 909 kbps (88.2/44.1 kHz) is selected

This product contains software that is subject to the GNU General Public License (“GPL”) or GNU Lesser General Public License (“LGPL”). These establish that customers have the right to acquire, modify, and redistribute the source code of said software in accordance with the terms of the GPL or the LGPL.

For details of the GPL, LGPL and other software licenses, please refer to [Software License Information] under  [Setup] - [Advanced Settings] - [System Settings] on the product.

You may find a copy of the relevant source code as required under the GPLv2 (and other licenses) at <https://oss.sony.net/Products/Linux>

You may obtain the source code as required by the GPLv2 on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at <https://oss.sony.net/Products/Linux>
This offer is valid to anyone in receipt of this information.

Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.

“DSEE Extreme” is a trademark of Sony Corporation.

“TRILUMINOS” and “TRILUMINOS” logo are a registered trademark of Sony Corporation.

The Spotify Software is subject to third party licenses found here:
<https://www.spotify.com/connect/third-party-licenses>.

Spotify and Spotify logos are trademarks of the Spotify Group.(*)

* Depending on the country and region, this function may not be available.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

All other trademarks are trademarks of their respective owners.

5-025-234-11(3) Copyright 2021 Sony Corporation